


Vision

DIAGRAM

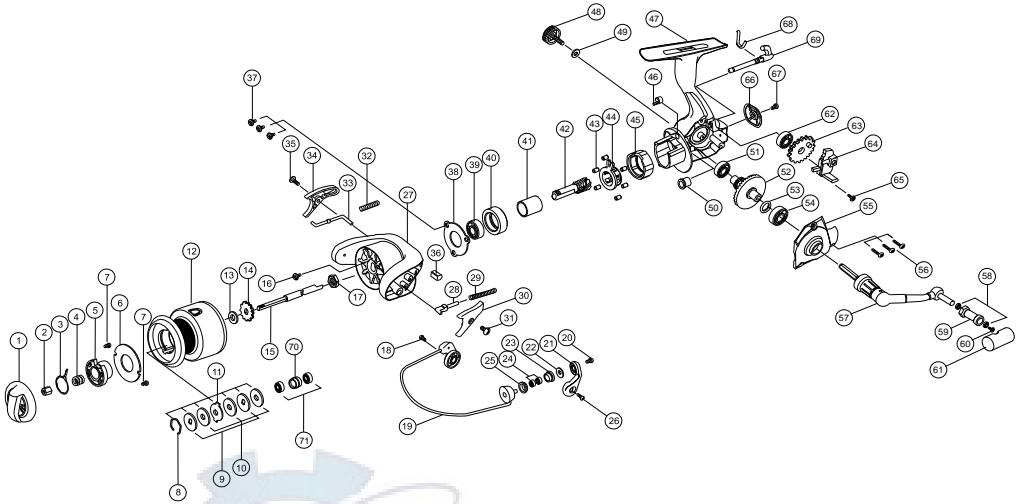

PART LIST

No.	Part List	No.	Part List	No.	Part List
1.	Drag Knob	25.	Line Roller Bush	49.	Dust Cover w/s
2.	Drag Nut	26.	Arm Lever s/c	50.	Main Shaft Bush
3.	Drag Click Claw	27.	Rotor	51.	Ball Bearing 7 x 11 x 2.5
4.	Drag Coil Spring	28.	Bail Spring Holder	52.	Drive Gear
5.	Front Drag Under Cap	29.	Bail Spring	53.	Drive Gear Adj. w/s
6.	Drag Knob Cover	30.	Bail Spring Cover	54.	Ball Bearing 7 x 13 x 4
7.	Drag Knob Cover s/c	31.	Bail Spring Cover s/c	55.	Body Cover
8.	Spool Ring	32.	Kick Lever Spring	56.	Body Cover s/c
9.	Spool "D" w/s	33.	Kick Lever	57.	Handle Assy
10.	Spool "B" w/s	34.	Kick Lever Cover	58.	Ball Bearing 4 x 7 x 2.5
11.	Spool "A" w/s	35.	Kick Lever Cover s/c	59.	Handle Knob Stand
12.	Spool Assy	36.	Side Balance	60.	Handle s/c
13.	Spool Adj. w/s	37.	Ball Bearing Cover s/c	61.	Handle Wood Knob
14.	Click Gear	38.	Ball Bearing Cover	62.	Ball Bearing 5.5 x 10 x 2.5
15.	Main Shaft	39.	Ball Bearing 7 x 13 x 4	63.	O/S Gear
16.	Rotor Nut Lock s/c	40.	Ball Bearing Holder	64.	O/S Slider
17.	Rotor Nut	41.	One Way Sleeve	65.	Main Shaft s/c
18.	Bail Holder s/c	42.	Pinion Gear	66.	Body Rear Cap
19.	Bail Assy	43.	One Way Pin Roller	67.	Body Rear Cap s/c
20.	Bail s/c	44.	One Way Pin Retainer	68.	Stopper Lever s/p
21.	Arm Lever	45.	One Way Housing	69.	Stopper Lever
22.	Bail w/s	46.	One Way Cam	70.	Spool Bush
23.	Line Roller	47.	Body	71.	Ball Bearing 5 x 9 x 3
24.	Ball Bearing 4 x 7 x 2.5	48.	Dust Cover		