



PART LIST

1. Button	17. Line Guide Screw	33. Worm Shaft Bush	49. Handle Ass'y	65. Crank Shaft Gear
2. Button Spring	18. Ball Bearing (5x11x4)	34. Worm Shaft Gear	50. Ball Bearing (4x7x2.5)	66. Crank Retainer Screw
3. Side Plate	19. Spool Shaft "O" Ring	35. Worm Shaft "E" Clip	51. Handle Knob	67. Crank Shaft Retainer
4. Side Plate Screw	20. Spool Cover Retainer	36. Pinion Gear	52. Handle s/c	68. Crank Shaft "E" Clip
5. Button Side Cover	21. Spool Cover Retainer Screw	37. Handle Side Cover	53. Handle Knob Cap	69. Ball Bearing (5x9x3)
6. Spool Cover	22. Side Cover Screw	38. Ball Bearing (3x7x3)	54. Handle Nut	70. Line Guide Carrier
7. Locker Spring	23. Frame	39. Tension Knob Hexagon Ring	55. Handle Nut Cap	71. Pawl
8. Locker	24. Thumb Bar	40. Tension Knob "O" Ring	56. Handle Nut Cap Screw	72. Pawl Cap
9. Spool Cover Washer	25. Thumb Bar Lever	41. Tension Knob BCL Washer	57. One Way Bearing	73. Hood
10. Ball Bearing (5x11x4)	26. Thumb Bar Screw	42. Tension Knob Rubber Washer	58. One Way Sleeve	74. Carrier Guide
11. Hexagon Ring	27. Release	43. Tension Knob	59. "D" Washer	75. Worm Shaft
12. Spool Cover Screw	28. Release Spring	44. Spring Washer	60. "B" Washer	76. Worm Shaft Washer
13. Brake Ring	29. Clutch	45. Ball Bearing (8x14x4)	61. Drive Gear	77. Worm Shaft "E" Clip
14. Shoe Guide	30. Pinion Yoke	46. Adjust Ring	62. Ratchet Washer	
15. Brake Shoe	31. Yoke Spring	47. Star Drag	63. Ratchet	
16. Spool Ass'y	32. Clutch Spring	48. Leaf Spring	64. Crank Shaft	