



PART LIST

- | | | | | |
|---------------------------|--------------------------------|--------------------------------|----------------------------|--------------------------|
| 1. Button | 17. Line Guide Screw | 33. Worm Shaft Bush | 49. Handle Ass'y | 65. Crank Shaft Gear |
| 2. Button Spring | 18. Ball Bearing (5x11x4) | 34. Worm Shaft Gear | 50. Ball Bearing (4x7x2.5) | 66. Crank Retainer Screw |
| 3. Side Plate | 19. Spool Shaft "O" Ring | 35. Worm Shaft "E" Clip | 51. Handle Knob | 67. Crank Shaft Retainer |
| 4. Side Plate Screw | 20. Spool Cover Retainer | 36. Pinion Gear | 52. Handle s/c | 68. Crank Shaft "E" Clip |
| 5. Button Side Cover | 21. Spool Cover Retainer Screw | 37. Handle Side Cover | 53. Handle Knob Cap | 69. Ball Bearing (5x9x3) |
| 6. Spool Cover | 22. Side Cover Screw | 38. Ball Bearing (3x7x3) | 54. Handle Nut | 70. Line Guide Carrier |
| 7. Locker Spring | 23. Frame | 39. Tension Knob Hexagon Ring | 55. Handle Nut Cap | 71. Pawl |
| 8. Locker | 24. Thumb Bar | 40. Tension Knob "O" Ring | 56. Handle Nut Cap Screw | 72. Pawl Cap |
| 9. Spool Cover Washer | 25. Thumb Bar Lever | 41. Tension Knob BCL Washer | 57. One Way Bearing | 73. Hood |
| 10. Ball Bearing (5x11x4) | 26. Thumb Bar Screw | 42. Tension Knob Rubber Washer | 58. One Way Sleeve | 74. Carrier Guide |
| 11. Hexagon Ring | 27. Release | 43. Tension Knob | 59. "D" Washer | 75. Worm Shaft |
| 12. Spool Cover Screw | 28. Release Spring | 44. Spring Washer | 60. "B" Washer | 76. Worm Shaft Washer |
| 13. Brake Ring | 29. Clutch | 45. Ball Bearing (8x14x4) | 61. Drive Gear | 77. Worm Shaft "E" Clip |
| 14. Shoe Guide | 30. Pinion Yoke | 46. Adjust Ring | 62. Ratchet Washer | |
| 15. Brake Shoe | 31. Yoke Spring | 47. Star Drag | 63. Ratchet | |
| 16. Spool Ass'y | 32. Clutch Spring | 48. Leaf Spring | 64. Crank Shaft | |