

## Replacement LCD Counter Scotty HP Electric Downriggers only

- 1. Place lid upside down on a soft surface.
- Remove the two screws from the sensor holder and remove the old counter and sensor holding assembly from lid.
- Position the replacement counter in the lid from the front side an align the sensor holder with the counter housing being careful to not pinch the sensor wires
- A gasket is not required with the replacement "ON/OFF style" digital counter
- Use the two supplied machine screws (not the selftapping screws from the original counter) to fasten the sensor holder to the replacement counter frame.

**IMPORTANT**: Only fasten the screws hand tight! DO NOT OVER TIGHTEN!

## Using the digital counter

- TO TURN COUNTER ON, PRESS . TO TURN COUNTER OFF, PRESS AND HOLD FOR 5 SECONDS.
- TO RESET COUNTER, PRESS TRIPLE PRINCE
- TO TOGGLE BETWEEN "FEET" AND "METERS", PRESS AND HOLD FOR 5 SECONDS.
- ILLUMINATE BY PRESSING . COUNTER WILL DIM AFTER 30 SECONDS.
- ENSURE AUTO-STOP LINE BEADS ARE PRESENT AND PROPERLY LOCATED PRIOR TO EACH USE.



