




BLAST GOLD SW

Saltwater Series

Model : 2000 / 3000 / 4000 / 5000 / 3000H / 4000H / 5000H

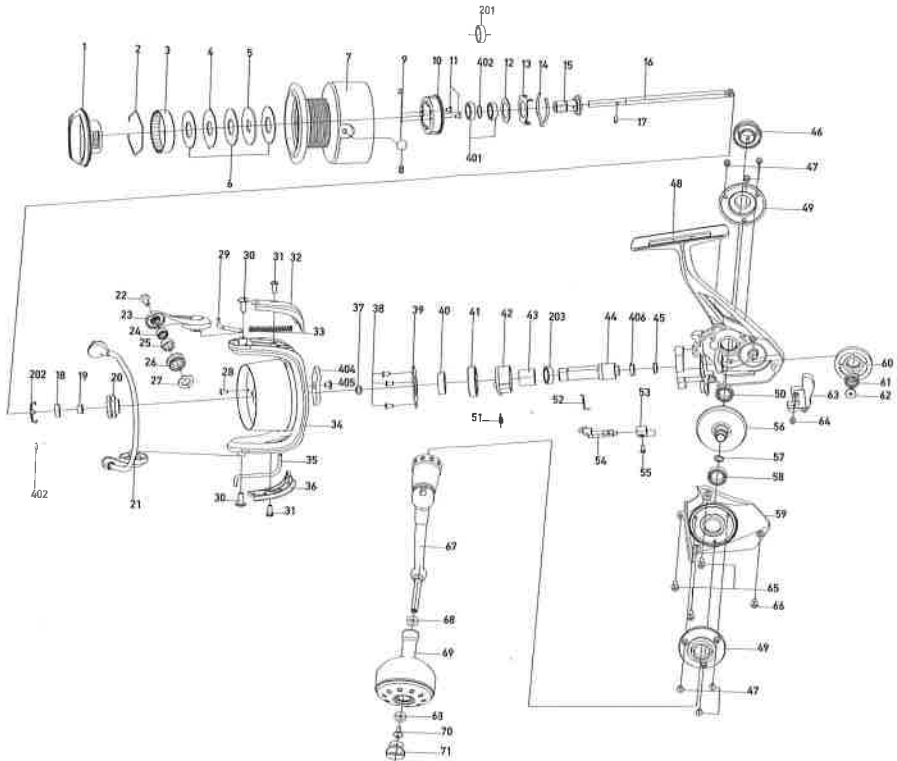

No.	Part Name	No.	Part Name	No.	Part Name	No.	Part Name	No.	Part Name
1	Drag Knob Assy	18	Ball Bearing	35	Kick Level	52	Anti-Reverse Level Spring	69	Handle Knob
2	Drag Washer Retainer	19	Bushing	36	Rotor Cover-B	53	Anti-Reverse Level	70	Screw
3	Drag Knob Click Plate	20	Rotor Nut	37	Adjusting Washer-B	54	Anti-Reverse Shaft	71	Handle Knob Cap
4	Eared Washer	21	Ball Assy	38	Screw	55	Screw		
5	Key Washer	22	Screw	39	Rotor Cover	56	Drive Gear Assy		2000 / 3000 Model
6	Drag Washer	23	Ball Arm	40	Ball Bearing	57	Washer	201	Ball Bearing
7	Spool	24	Ball Bearing	41	Roller Room	58	Ball Bearing	202	Ball Bearing Cover
8	Line Clip	25	Line Roller Bushing	42	Roller	59	Body Cover	203	Ball Bearing
9	Line Clip Spring	26	Line Roller	43	Roller Inner Bushing	60	Oscillation Gear		
10	Screw	27	Line Roller Washer	44	Pinion Gear	61	Ball Bearing		4000 / 5000 Model
11	Ball Bearing Retainer	28	Screw	45	Pinion Gear Bushing-B	62	Screw	401	Ball Bearing
12	Adjusting Washer-A	29	Ball Spring Shaft	46	Handle Cap	63	Slider Assy	402	Washer
13	Click Plate	30	Screw	47	Screw	64	Screw	403	Ball Bearing Retainer
14	Click Leaf Spring	31	Screw	48	Body	65	Ball Bearing	404	Balance Plate
15	Shaft Drag Adapter	32	Rotor Cover-A	49	Decorating Ring	66	Screw	405	Screw
16	Main Shaft	33	Ball Spring	50	Ball Bearing	67	Handle Assy	406	Pinion Gear Bushing-A
17	Pin	34	Rotor	51	Spring	68	Bushing		