



Key No.	Parts No.	Parts Name.	Key No.	Parts No.	Parts Name.
1		O-RING	43		CROSSWIND BLOCK SHAFT
2		DRAG WASHER	44		SCREW
3		DRAG WASHER	45		BUSHING
4		SHAFT	46		GEAR CROSSWIND
5		SCREW	47		WASHER
6		ROD CLAMP NUT	48		SCREW
7		SEAL	49		BODY CAP
8		ROTOR NUT	50		RETAINING RING
9		O-RING	51		SPOOL BRIDGE
10		SCREW	52		O-RING
11		ROTOR CAP	53		DRAG WASHER
12		ROTOR	54		BEARING 9X15X5
13		O-RING	55		STEEL BALL
14		BODY CAP	56		CLIP LINE SPRING
15		SCREW	57		SPRING
16		BODY CAP	58		CLIP LINE
17		O-RING	59		SPOOL
18		WASHER	60		WASHER-EAR
19		BEARING 10X22X6	61		DRAG WASHER
20		ONE WAY CLUTCH	62		DRAG WASHER
21		BEARING 10X18X5	63		DRAG WASHER
22		WASHER	64		BEARING CUP
23		PINION	65		SEAL
24		HANDLE COVER	66		BEARING 9X20X6
25		BODY	67		RETAINING RING
26		SCREW	68		KNOB ASSEMBLY
27		FRICTION RING	69		LINE ROLLER SCREW
28		SEAL	70		WASHER
29		WASHER	71		LINE ROLLER BUSHING
30		BEARING 10X18X5	72		LINE ROLLER WASHER
31		SCREW	73		LINE ROLLER BUSHING
32		GEAR ASSEMBLY	74		BAIL WIRE ASSEMBLY
33		FRICTION RING	75		LINE ROLLER
34		SIDE PLATE	76		BAIL ARM
35		WASHER	77		BAIL ARM SCREW
36		SIDE PLATE SCREW	78		PIVOT ARM
37		HANDLE ASSEMBLY	79		LINE ROLLER SPRING
38		SCREW M 3X8	80		LEVER TRIP
39		CROSSWIND BLOCK SCREW	81		PIVOT ARM PLATE
40		CROSSWIND BLOCK	82		BAIL ARM COVER
41		CROSSWIND BLOCK LEVER	83		SCREW
42		SCREW			