



Key No.	Parts No.	Parts Name.	Key No.	Parts No.	Parts Name.
1		KNOB ASSEMBLY	37		BEARING
2		WASHER SPRING CLIP	38		BEARING COVER
3		BEARING	39		SHAFT ASSEMBLY
4		BEARING COVER	40		BODY CAP
5		BEARING CAP	41		SEAL
6		DRAG WASHER	42		SCREW
7		DRAG WASHER	43		BODY CAP
8		WASHER-EAR	44		BEARING
9		CLICK SPRING	45		ONE WAY CLUTCH
10		CLICK RETAINER	46		BEARING
11		SPOOL	47		ONE WAY WASHER
12		SCREW	48		PINION
13		ROD CLAMP NUT	49		BODY ASSEMBLY
14		SEAL	50		HANDLE COVER
15		ROD CLAMP KIT	51		FOOT
16		WASHER	52		SEAL
17		SCREW	53		SEAL
18		ROTOR CAP	54		BEARING
19		ROTOR	55		SCREW
20		PIVOT ARM	56		GEAR ASSEMBLY
21		LEVER TRIP	57		SIDE PLATE
22		BAIL ARM COVER	58		SIDE PLATE SCREW
23		SCREW	59		SCREW
24		BAIL ARM SCREW	60		HANDLE ASSEMBLY
25		LINE ROLLER SCREW	61		CROSSWIND BLOCK LEVER
26		BAIL ARM	62		CROSSWIND BLOCK SCREW
27		LINE ROLLER BUSHING	63		SCREW
28		WASHER	64		CROSSWIND BLOCK SHAFT
29		LINE ROLLER	65		CROSSWIND BLOCK
30		LINE ROLLER BUSHING	66		SCREW
31		WASHER	67		BUSHING
32		BAIL WIRE ASSEMBLY	68		GEAR CROSSWIND
33		BAIL WIRE LEVER	69		WASHER
34		SPRING BAIL	70		SEAL
35		DRAG WASHER	71		BODY CAP SCREW
36		DRAG WASHER	72		BODY CAP