



Key No.	Parts No.	Parts Name.	Key No.	Parts No.	Parts Name.
1		O-RING	44		SCREW
2		DRAG WASHER	45		BUSHING
3		DRAG WASHER	46		GEAR CROSSWIND
4		SHAFT	47		WASHER
5		SCREW	48		SCREW
6		ROD CLAMP NUT	49		BODY CAP
7		SEAL	50		RETAINING RING
8		ROTOR NUT	51		SPOOL BRIDGE
9		O-RING	52		O-RING
10		SCREW	53		DRAG WASHER
11		ROTOR CAP	54		BEARING 9X15X5
12		ROTOR	55		STEEL BALL
13		O-RING	56		CLIP LINE SPRING
14		BODY CAP	57		SPRING
15		SCREW	58		CLIP LINE
16		BODY CAP	59		SPOOL
17		O-RING	60		WASHER-EAR
18		WASHER	61		DRAG WASHER
19		BEARING 10X22X6	62		DRAG WASHER
20		ONE WAY CLUTCH	63		DRAG WASHER
21		BEARING 10X18X5	64		BEARING CUP
22		WASHER	65		SEAL
23		PINION	66		BEARING 9X20X6
24		HANDLE COVER	67		RETAINING RING
25		BODY	68		KNOB ASSEMBLY
26		SCREW	69		LINE ROLLER SCREW
27		FRICITION RING	70		WASHER
28		SEAL	71		LINE ROLLER BUSHING
29		WASHER	72		LINE ROLLER WASHER
30		BEARING 10X18X5	73		LINE ROLLER BUSHING
31		SCREW	74		BAIL WIRE ASSEMBLY
32		GEAR ASSEMBLY	75		LINE ROLLER
33		FRICITION RING	76		BAIL ARM
34		SIDE PLATE	77		BAIL ARM SCREW
36		SIDE PLATE SCREW	78		PIVOT ARM
37		HANDLE ASSEMBLY	79		LINE ROLLER SPRING
39		CROSSWIND BLOCK SCREW	80		LEVER TRIP
40		CROSSWIND BLOCK	81		PIVOT ARM PLATE
41		CROSSWIND BLOCK LEVER	82		BAIL ARM COVER
42		SCREW	83		SCREW
43		CROSSWIND BLOCK SHAFT			