



NO.	PART NAME	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	
1	FRAME	TRANSFER GEAR	HOOD	E-RING	SPOOL COVER	RUBBER WASHER	CARRIER ASSEMBLY	SCREW	LEFT COVER	BAIT CLICK BUTTON	B-CRICK BUTTON SPRING	SCREW	LINE GUIDE PAWL	SPACER	PAWL CAP	SPOOL ASSY	SHUTTLE GEAR	E-RING	CARRIER GUIDE RETAINER	RIGHT SIDE PLATE	CLUTCH CAM	CLUTCH SPRING BUSHING	CLUTCH SPRING	PILOT LEVER	STEM	RETURN PAWL	RETURN PAWL SPRING	CLUTCH CAM SCREW	PUSH BAR	PUSH BAR STEM	E-RING	BUSHING	BEARING RETAINER	BALL BEARING	BEARING RETAINER	GEAR STEM	GEAR STEM WASHER	GEAR SCREW	BRAKE RING	PINION YOKE	PINION GEAR	PINION GEAR SPRING	DOG ASSY	RATCHET	DRAG WASHER	DRIVE GEAR	DRAG WASHER	KEYED DRAG WASHER	EARED WASHER	KEYED DRAG WASHER	BUSHING	BUSHING	GEAR STEM WASHER	RIGHT COVER ASSY	RIGHT COVER SCREW	D-RING	D-RING	TENSION KÖNB	RUBBER WASHER	SPACER	SCREW	DRAG SPRING WASHER	STAR DRAG RIVET ASSY	LEAF SPRING	HANDLE ASSY	HANDLE NUT	HANDLE NUT CAP	SCREW

AGL200