



### DECEIVER LP

NO.	PART NAME	NO.	PART NAME	NO.	PART NAME	NO.	PART NAME
1	FRAME	19	FRONT COVER	37	CLUTCH SPRING	55	HAND NUT CAP SCREW
2	CLUTCH BAR	20	FRONT COVER SCREW-B	38	CLUTCH SPRING BUSHING	56	R-COVER SCREW (B)
3	CLUTCH LINK	21	BALL BEARING	39	CLUTCH CAM	57	O-RING
4	CLUTCH BAR SCREW	22	E-RING	40	CAM PLATE	58	BUSHING
5	SPOOL	23	IDLER(L) WASHER	41	CAM PLATE SCREW	59	BEARING RETAINER
6	WORM SHAFT	24	BEARING PLATE	42	PINION YOKE	60	SPOOL SPACER (B)
7	WORM SHAFT PIN	25	BEARING PLATE SCREW	43	PINION GEAR	61	TENSION WASHER
8	LINE GUIDE PIPE	26	IDLER(L) WASHER	44	PINION YOKE SPRING	62	CAST CONTROL CAP
9	IDLER(S)	27	IDLER(L)	45	SPACER	63	RIGHT SIDE COVER
10	WORM SHAFT BUSHING	28	CRANK SHAFT	46	ONE WAY CLUTCH	64	R_COVER SCREW
11	WORM SHAFT WASHER	29	RATCHET	47	R-COVER SCREW (A)	65	LEFT COVER CAP
12	E-RING	30	RATCHET WASHER	48	BALL BEARING	66	SPOOL COVER
13	PILLAR	31	DRIVE GEAR	49	DRAG SPRING WASHER	67	SPOOL COVER SCREW-A
14	LINE GUIDE PIPE	32	CARBON GRAPHITE	50	STAR DRAG	68	LEAF SPRING
15	LINE GUIDE PAWL	33	DRIVE WASHER (D)	51	LEAF SPRING	69	SPOOL SPACER
16	SPACER	34	O.W.C. INNER RING	52	HANDLE ASSEMBLY	70	BALL BEARING
17	PAWL CAP	35	RETURN PAWL SPRING	53	HANDLE NUT	71	BEARING RETAINER
18	FRONT COVER SCREW-A	36	RETURN PAWL	54	HAND NUT CAP		