



Part #	Part Name		
1	BODY ASSEMBLY	35	O/S GEAR
2	N-R PAWL	36	O/S SLIDER
3	"E" WASHER - 1145278	37	MAIN SHAFT
4	N-R LEVER	38	O/S SLIDER SCREW
5	N-R LEVER SHAFT	39	DRIVE GEAR
6	N-R LEVER SCREW	40	GEAR WASHER - 1146817
7	N-R LEVER SPRING	41	BUSHING OR BEARING 14X8X3.5 - 1145073
8	PINION	42	BODY COVER ASSEMBLY
9	BALL BEARING 14X8X3.5 - 1145073	43	COVER SCREW A
10	BEARING COVER	44	COVER SCREW B
11	BEARING COVER SCREW	45	CLICK GEAR - 1146029
12	N-R SPRING HOLDER	46	SHEET WASHER - 1146805
13	N-R SPRING	47	SPOOL ASSEMBLY
14	SPACER	48	DRAG WASHER
15	ROTOR	49	LINING WASHER
18	TRIP PLUNGER	50	SPOOL WASHER
19	BAIL ARM SPRING - 1146792	51	STOP RING
20	BAIL ARM COVER	52	DRAG KNOB
21	SCREW COVER	53	DRAG NUT
22	BAIL ARM	54	DRAG SPRING
23	BAIL ARM SCREW (2)	55	DRAG KNOB WASHER
24	BAIL WIRE ASSEMBLY - 11450456 (435) 1140469 (440)	56	DRAG KNOB COVER
25	LINE ROLLER BUSHING - 1146335	57	DRAG KNOB SCREW
26	LINE ROLLER - 1146128	58	REAR COVER
27	LINE ROLLER WASHER - 1146856	59	REAR COVER SCREW
28	LINE ROLLER SCREW	60	HANDLE ARM ASSEMBLY
29	ROTOR NUT	61	HANDLE LOCK WASHER
30	ROTOR NUT WASHER	62	HANDLE LOCK
31	ROTOR NUT SCREW		
32	O/S SLIDER PLATE		
33	O/S SLIDER PLATE SCREW		
34	BUSHING OR BEARING - 1145076		