



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
001	79-66-0099-01	Spool Assembly	28	79-37-0058-01	Trip Lever
1	79-40-0083-01	Drag Nut	29	79-58-0193-01	Trip Lever Screw
2	79-53-0040-01	Retainer	30	79-47-0148-01	Trip Lever Plate
3	79-72-0294-01	Washer Metal	31	79-58-0070-01	Plate Screw
4	79-72-0295-01	Fiber Washer	32	Not Available	Pickup Housing
5	79-72-0296-01	Eared Washer	34	79-58-0026-01	Bearing Retainer Screw
6	79-72-0297-01	Fiber Washer	35	79-53-0041-01	Bearing Retainer
7	79-72-0294-01	Metal Washer	36	79-04-0034-01	Ball Bearing
8	79-72-0298-01	Felt Washer	39	79-46-0047-01	Pinion
10	79-67-0116-01	Click Spring	40	79-58-0026-01	Non-Reverse Pawl Screw
11	79-58-0016-01	Click Spring Screw	41	79-67-0117-01	Non-Reverse Pawl Spring
12	79-72-0213-01	Washer Fiber	42	79-43-0054-01	Non-Reverse Pawl
13	79-60-0059-01	Main Shaft	43	Not Available	Frame Assembly
14	79-03-0043-01	Bail Wire	44	79-67-0118-01	Tension Spring
15	79-58-0194-01	Bail Block Screw	45	79-10-0030-01	Non-Reverse Button
16	79-57-0010-01	Line Roller	46	79-45-0015-01	Non-Reverse Button Pin
17	79-21-0006-01	Spacer Cup	47	79-12-0014-01	Frame Cap
18	79-72-0183-01	Lock Washer	48	79-75-0032-01	Yoke
19	79-40-0050-01	Roller Nut	49	79-28-0065-01	Drive Gear
20	79-07-0036-01	Bail Bracket	50	79-20-0073-01	Crank Assembly
21	79-58-0194-01	Bail Bracket Screw	51	79-47-0147-01	Cover Plate
22	79-67-0049-01	Bail Spring	52	79-58-0023-01	Cover Plate Screw
23	79-47-0148-01	Bail Spring Plate	53	79-08-0014-01	Bail Stop
24	79-58-0070-01	Plate Screw	54	79-28-0066-01	Gear
25	79-40-0068-01	Pickup Housing Nut	55	79-58-0192-01	Gear Screw
26	79-72-0236-01	Pickup Nut Washer	56	79-58-0068-01	Yoke Screw
27	79-67-0119-01	Trip Lever Spring	57	79-72-0299-01	Thrust Washer