



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
001	79-66-0100-01	Spool Assembly	43	Not Available	Frame Assembly
1	79-40-0064-01	Drag Nut	44	79-58-0145-01	Cover Plate Screw
2	79-54-0019-01	Retainer Ring	45	79-47-0151-01	Cover Plate
3	79-72-0217-01	Metal Washer	50	79-28-0018-01	Driver Gear
4	79-72-0305-01	Nylon Washer	51	79-58-0198-01	Non Reverse Pawl Screw
5	79-72-0219-01	Eared Washer	52	79-54-0020-01	Retainer Pin
6	Not Available	Spool	53	79-43-0055-01	Non-Reverse Pawl
7	79-43-0017-01	Click Pawl	57	79-67-0043-01	Non-Reverse Pawl Spring
8	79-58-0055-01	Click Pawl Screw	60	79-10-0018-01	Non-Reverse Button
9	79-72-0306-01	Nylon Washer	63	79-20-00075-01	Crank Assembly
10	79-72-0175-01	Fiber Washer	65	79-67-0045-01	Click Pawl Spring
11	79-60-0060-01	Main Shaft	67	79-00-0005-01	Bail Stop
12	79-03-0044-01	Bail Wire Assembly	69	79-63-0010-01	Roller Sleeve
13	79-40-0001-01	Pickup Nut	70	79-21-0005-01	Roller Cap
14	79-72-0246-01	Pickup Washer	73	79-50-0034-01	Ratchet
15	Not Available	Pickup Housing	76	79-02-0021-01	Throwout Arm
16	79-58-0144-01	Bail Wire Screw	85	79-67-0004-01	Bail Stop Spring
17	79-58-0060-01	Trip Lever Screw	88	79-12-0008-01	Frame Cap
18	79-43-0018-01	Trip Lever	91	79-37-0022-01	Level Wind Lever
19	79-67-0037-01	Trip Lever Spring	92	79-58-0143-01	Bail Spring Plate Screw
22	79-57-0007-01	Line Roller	95	79-47-0150-01	Bail Spring Plate
23	79-07-0038-01	Bail Bracket	105	79-58-0073-01	Click Spring Screw
24	79-58-0142-01	Bail Bracket Screw	106	79-47-0149-01	Trip Lever Plate
25	79-67-0122-01	Bail Spring	107	79-58-0146-01	Trip Plate Screw
29	79-58-0065-01	Roller Screw	108	79-58-0076-01	Trip Spring Screw
40	79-53-0013-01	Bearing Retainer	112	79-11-0014-01	Silent Non-Reverse Cam
41	79-04-0016-01	Ball Bearing	138	79-09-0002-01	Gear Bushing
42	79-46-0017-01	Pinion			