



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
001	79-66-0077-01	Spool Assembly	45	79-47-0102-01	Cover Plate
1	79-40-0062-01	Drag Nut	46	79-75-0021-01	Level Wind Yoke
2	79-54-0003-01	Retainer Ring	48	79-58-0068-01	Yoke Screw
3	79-72-0122-01	Metal Washer	49	79-57-0008-01	Level Wind Roller
4	79-72-0354-01	Fiber Washer	50	79-28-0076-01	Drive Gear
5	79-72-0130-01	Eared Washer	51	79-58-0012-01	Non-Reverse Pawl Screw
7	79-43-0005-01	Click Pawl	52	79-54-0002-01	Non-Reverse Button Retainer
8	79-58-0001-01	Click Pawl Screw	53	79-43-0003-01	Non-Reverse Pawl
9	79-72-0271-01	Rear Washer	57	79-67-0008-01	Non-Reverse Spring
10	79-72-0151-01	Rear Washer	60	79-10-0020-01	Non-Reverse Button
11	79-60-0041-01	Main Shaft	63	79-20-0060-01	Crank Assembly
12	79-03-0036-01	Bail Wire Assembly	65	79-67-0009-01	Click Pawl Spring
13	79-40-0006-01	Pickup Nut	67	79-00-0002-01	Bail Stop
14	79-72-0010-01	Pickup Washer	69	79-63-0001-01	Roller Sleeve
15	N/A	Pickup Housing	70	79-21-0001-01	Roller Cup
16	79-58-0152-01	Bail Screw	71	79-08-0002-01	Bail Brake
17	79-58-0062-01	Trip Lever Screw	72	79-63-0018-01	Sleeve
18	79-37-0040-01	Trip Lever	73	79-50-0016-01	Ratchet
19	79-67-0078-01	Trip Lever Spring	76	79-02-0009-01	Throwout Arm
22	79-57-0001-01	Line Roller	78	79-72-0120-01	Button Retainer Washer
23	79-07-0013-01	Bail Bracket	85	79-67-0004-01	Bail Stop Spring
24	79-58-0151-01	Bail Bracket Screw	88	79-12-0009-01	Crank Cap
25	79-67-0036-01	Bail Spring	92	79-58-0149-01	Bail Spring Plate Screw
29	79-58-0050-01	Roller Screw	95	79-47-0103-01	Bail Spring Plate
39	79-58-0032-01	Bearing Retainer Screw	98	79-28-0043-01	Gear
40	79-53-0015-01	Bearing Retainer	100	79-58-0071-01	Gear Screw
41	79-04-0003-01	Ball Bearing	102	79-72-0319-01	Drag Washer
42	79-46-0032-01	Pinion	106	79-47-0104-01	Trip Lever Plate
43	N/A	Frame Assembly	107	79-58-0143-01	Trip Lever Plate Screw
44	79-58-0150-01	Cover Screw			