


SHIMANO

ANTARES SA-RB

ANT-L

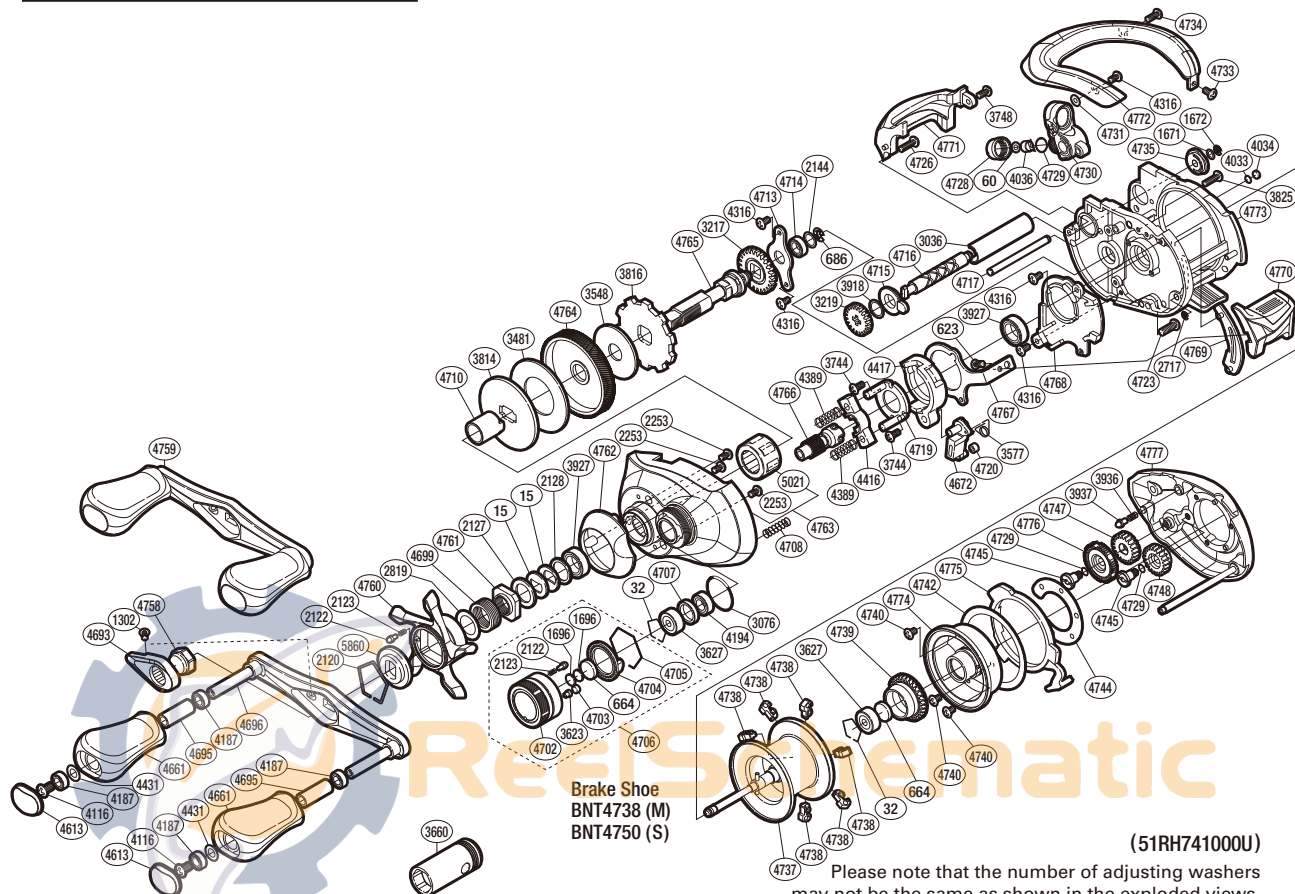

Brake Shoe
BNT4738 (M)
BNT4750 (S)

(51RH741000U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4034	Anti-Thrust Washer	BNT4733	Screw
BNT0032	Bearing Retainer	BNT4036	Line Guide Pawl	BNT4734	Screw
BNT0060	Spacer	BNT4116	Screw	BNT4735	Worm Bushing B
BNT0623	Screw	BNT4187	Ball Bearing	BNT4737	Spool Assembly
BNT0664	Spacer B	BNT4194	Ball Bearing	BNT4738	Brake Shoe M
BNT0686	E Lock	BNT4316	Screw	BNT4739	Brake Ring Gear
BNT1302	Screw	BNT4389	Yoke Spring	BNT4740	Screw
BNT1671	Washer	BNT4416	Yoke	BNT4742	Washer
BNT1672	E Lock	BNT4417	Clutch Cam	BNT4744	Brake Case Washer
BNT1696	Cast Control Spacer	BNT4431	Washer	BNT4745	Screw
BNT2120	Click Plate Retainer	BNT4613	Handle Knob Seal	BNT4747	BR Dial Gear
BNT2122	Click Pin	BNT4661	Handle Knob	BNT4748	Idle Gear
BNT2123	Click Spring	BNT4672	Clutch Pawl	BNT4758	Handle Nut
BNT2127	Star Drag Spacer	BNT4693	Handle Nut Plate	BNT4759	Handle Assembly
BNT2128	Bearing Washer	BNT4695	Handle Knob Pipe	BNT4760	Star Drag
BNT2144	Washer	BNT4696	Handle Shank Assembly	BNT4761	Star Drag Nut
BNT2253	Screw	BNT4699	Star Drag Spring	BNT4762	Clutch Button Attachment
BNT2717	E Lock	BNT4702	Cast Control Cap	BNT4763	Left Side Plate
BNT2819	Washer	BNT4703	Retainer Sheet	BNT4764	Drive Gear
BNT3036	Level Wind Guard	BNT4704	Cast Control Click Plate	BNT4765	Drive Shaft
BNT3076	O Ring	BNT4705	Cast Control Click Holder	BNT4766	Pinion Gear
BNT3217	Idle Gear	BNT4706	Cast Control Cap Assembly	BNT4767	Clutch Plate
BNT3219	Idle Gear	BNT4707	Bearing Spacer	BNT4768	Clutch Guard
BNT3481	Drag Washer	BNT4708	Damper Spring	BNT4769	Clutch Bar Guide B
BNT3548	Drag Washer	BNT4710	Roller Clutch Inner Tube	BNT4770	Quick-Fire II Clutch Bar
BNT3577	Clutch Pawl Spring	BNT4713	Drive Shaft Retainer	BNT4771	Level Wind Protector
BNT3623	Cast Control Cap Retainer	BNT4714	Ball Bearing	BNT4772	Thumb Rest
BNT3627	Ball Bearing	BNT4715	Worm Bushing A	BNT4773	One-Piece Frame
BNT3744	Screw	BNT4716	Worm Shaft	BNT4774	Brake Case
BNT3748	Screw	BNT4717	Stabilizer Bar	BNT4775	Side Plate Cam Lever
BNT3814	Key Washer	BNT4719	Clutch Cam Retainer	BNT4776	BR Dial
BNT3816	Anti-Reverse Ratchet	BNT4720	Clutch Pawl Bushing	BNT4777	Right Side Plate
BNT3825	Screw	BNT4723	Screw	BNT5021	Roller Clutch Bearing
BNT3918	Washer	BNT4726	Screw	BNT5860	Star Drag Click
BNT3927	Ball Bearing	BNT4728	Pawl Cap		
BNT3936	Click Spring	BNT4729	O Ring	BNT3660	Reel Wrench (accessory)
BNT3937	Click Pin	BNT4730	Line Guide	BNT4692	B-100 Oil (accessory)
BNT4033	Washer	BNT4731	Spacer	BNT4750	Brake Shoe S (accessory)