


# SHIMANO

## ANTARES SA-RB

## ANT-R

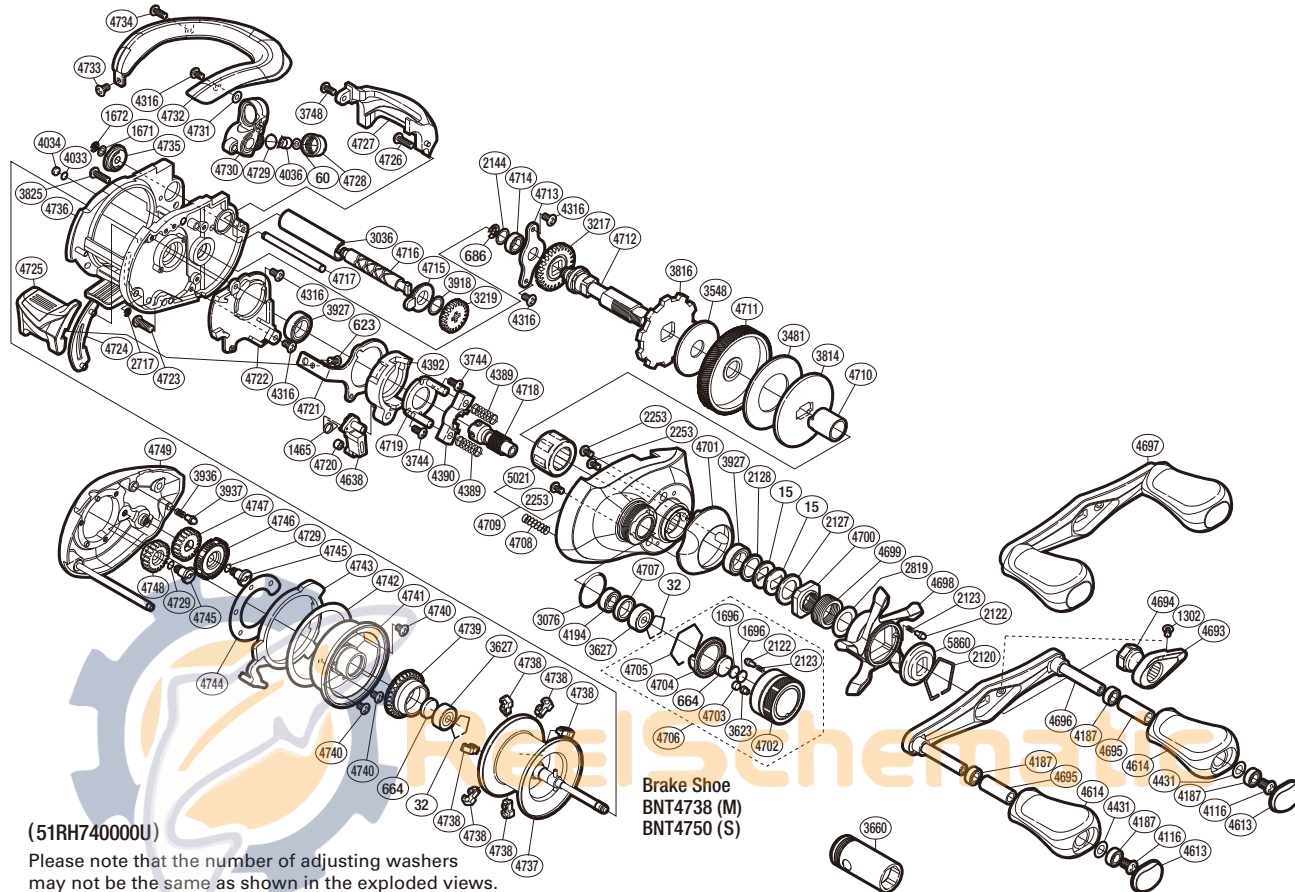

(51RH740000U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4034	Anti-Thrust Washer	BNT4718	Pinion Gear
BNT0032	Bearing Retainer	BNT4036	Line Guide Pawl	BNT4719	Clutch Cam Retainer
BNT0060	Spacer	BNT4116	Screw	BNT4720	Clutch Pawl Bushing
BNT0623	Screw	BNT4187	Ball Bearing	BNT4721	Clutch Plate
BNT0664	Spacer B	BNT4194	Ball Bearing	BNT4722	Clutch Guard
BNT0686	E Lock	BNT4316	Screw	BNT4723	Screw
BNT1302	Screw	BNT4389	Yoke Spring	BNT4724	Clutch Bar Guide B
BNT1465	Clutch Pawl Spring	BNT4390	Yoke	BNT4725	Quick-Fire II Clutch Bar
BNT1671	Washer	BNT4392	Clutch Cam	BNT4726	Screw
BNT1672	E Lock	BNT4431	Washer	BNT4727	Level Wind Protector
BNT1696	Cast Control Spacer	BNT4613	Handle Knob Seal	BNT4728	Pawl Cap
BNT2120	Click Plate Retainer	BNT4614	Handle Knob	BNT4729	O Ring
BNT2122	Click Pin	BNT4638	Clutch Pawl	BNT4730	Line Guide
BNT2123	Click Spring	BNT4693	Handle Nut Plate	BNT4731	Spacer
BNT2127	Star Drag Spacer	BNT4694	Handle Nut	BNT4732	Thumb Rest
BNT2128	Bearing Washer	BNT4695	Handle Knob Pipe	BNT4733	Screw
BNT2144	Washer	BNT4696	Handle Shank Assembly	BNT4734	Screw
BNT2253	Screw	BNT4697	Handle Assembly	BNT4735	Worm Bushing B
BNT2717	E Lock	BNT4698	Star Drag	BNT4736	One-Piece Frame
BNT2819	Washer	BNT4699	Star Drag Spring	BNT4737	Spool Assembly
BNT3036	Level Wind Guard	BNT4700	Star Drag Nut	BNT4738	Brake Shoe M
BNT3076	O Ring	BNT4701	Clutch Button Attachment	BNT4739	Brake Ring Gear
BNT3217	Idle Gear	BNT4702	Cast Control Cap	BNT4740	Screw
BNT3219	Idle Gear	BNT4703	Retainer Sheet	BNT4741	Brake Case
BNT3481	Drag Washer	BNT4704	Cast Control Click Plate	BNT4742	Washer
BNT3548	Drag Washer	BNT4705	Cast Control Click Holder	BNT4743	Side Plate Cam Lever
BNT3623	Cast Control Cap Retainer	BNT4706	Cast Control Cap Assembly	BNT4744	Brake Case Washer
BNT3627	Ball Bearing	BNT4707	Bearing Spacer	BNT4745	Screw
BNT3744	Screw	BNT4708	Damper Spring	BNT4746	BR Dial
BNT3748	Screw	BNT4709	Right Side Plate	BNT4747	BR Dial Gear
BNT3814	Key Washer	BNT4710	Roller Clutch Inner Tube	BNT4748	Idle Gear
BNT3816	Anti-Reverse Ratchet	BNT4711	Drive Gear	BNT4749	Left Side Plate
BNT3825	Screw	BNT4712	Drive Shaft	BNT5021	Roller Clutch Bearing
BNT3918	Washer	BNT4713	Drive Shaft Retainer	BNT5860	Star Drag Click
BNT3927	Ball Bearing	BNT4714	Ball Bearing		
BNT3936	Click Spring	BNT4715	Worm Bushing A	BNT3660	Reel Wrench (accessory)
BNT3937	Click Pin	BNT4716	Worm Shaft	BNT4692	B-100 Oil (accessory)
BNT4033	Washer	BNT4717	Stabilizer Bar	BNT4750	Brake Shoe S (accessory)