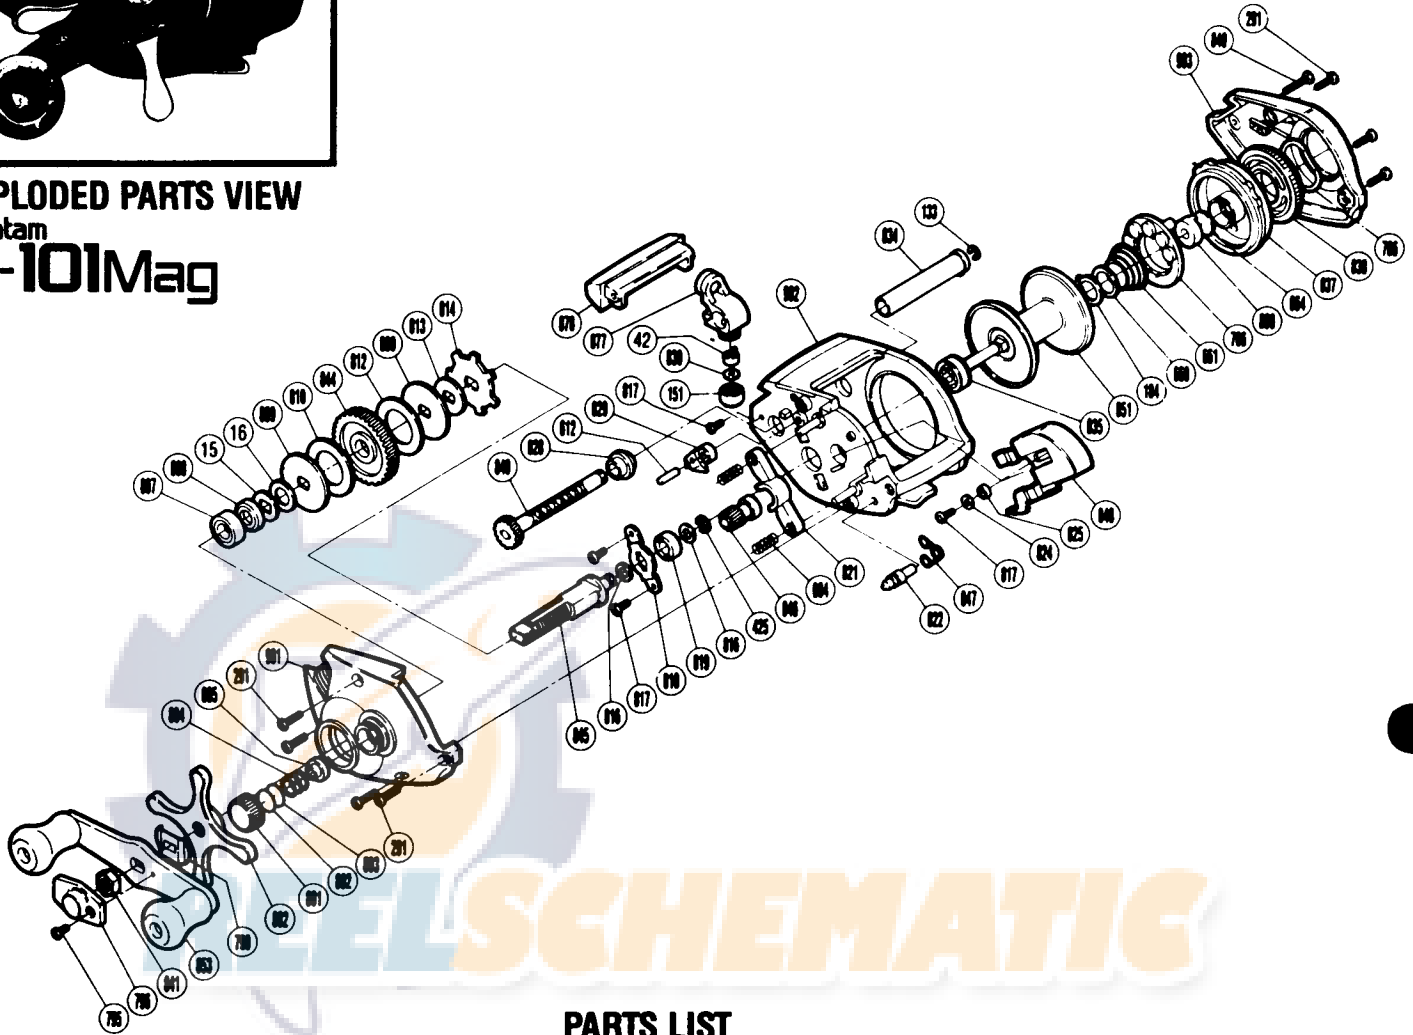


1989 REPAIR MANUALShimano American Corporation, One Shimano Dr.
Irvine, CA 92718**EXPLODED PARTS VIEW****Bantam
B-101Mag****PARTS LIST****PART # DESCRIPTION**

BNT 0015 Drag Spring Washer
 BNT 0016 Friction Washer (C)
 BNT 0042 Line Guide Pawl
 BNT 0133 Worm Shaft Retainer
 BNT 0151 Pawl Cap
 BNT 0184 Magnet Retainer Lock
 BNT 0291 Side Plate Screw
 BNT 0425 Clutchbutton Lock
 BNT 0604 Yoke Spring
 BNT 0612 Anti-Reverse Pawl Pin
 BNT 0660 Spring Spacer
 BNT 0661 Magnet Retainer Spring
 BNT 0664 Spacer (B)
 BNT 0706 Magnet Retainer
 BNT 0766 Dial Friction Washer
 BNT 0795 Handle Nut Plate Screw
 BNT 0796 Handle Nut Plate
 BNT 0799 Friction Washer
 BNT 0801 Cast Control Cap
 BNT 0802 Spool Tension Spacer (B)
 BNT 0803 Spool Tension Spacer (A)

PART # DESCRIPTION

BNT 0804 Spool Tension Spring
 BNT 0805 Spool Shaft Bushing (A)
 BNT 0807 Drive Shaft Bearing
 BNT 0808 Friction Washer (B)
 BNT 0809 Key Washer (A)
 BNT 0810 Drag Washer (A)
 BNT 0812 Drag Washer (B)
 BNT 0813 Key Washer (B)
 BNT 0814 Anti-Reverse Ratchet
 BNT 0816 Drive Shaft Washer
 BNT 0817 Multi Purpose Screw
 BNT 0818 Drive Shaft Retainer
 BNT 0819 Drive Shaft Bushing
 BNT 0821 Yoke
 BNT 0822 Retractor Spring Pin
 BNT 0824 Yoke Plate Washer (B)
 BNT 0825 Yoke Plate Washer (A)
 BNT 0828 Worm Bearing
 BNT 0829 Anti-Reverse Pawl
 BNT 0830 Spacer (Optional)
 BNT 0834 Level Wind Guard

PART # DESCRIPTION

BNT 0835 Spool Shaft Bushing (B)
 BNT 0837 Dial Case
 BNT 0838 Magnetic Control Dial
 BNT 0840 Left Side Plate Screw
 BNT 0841 Handle Nut
 BNT 0844 Drive Gear
 BNT 0845 Drive Shaft
 BNT 0846 Pinion Gear
 BNT 0847 Retractor Spring
 BNT 0848 Clutch Button
 BNT 0849 Worm Shaft
 BNT 0851 Spool
 BNT 0853 Handle Assembly
 BNT 0877 Line Guide
 BNT 0878 Level Wind Protector
 BNT 0880 Spool Shaft Bushing (C)
 BNT 0882 Star Drag
 BNT 0901 Left Side Plate
 BNT 0902 One-Piece Frame
 BNT 0903 Right Side Plate