



TO ORDER: USE BNT PREFIX  
WITH PART NUMBER

**PARTS LIST**

**BNT # DESCRIPTION**

0015	Drag Spring Washer
0016	Friction Washer (C)
0042	Line Guide Pawl
0133	Worm Shaft Retainer
0191	Side Plate Screw
0345	Drive Shaft Washer "B"
0425	Clutchbutton Lock
0489	Key Washer "A"
0490	Drag Washer
0596	Retractor Spring
0604	Yoke Spring
0609	Drive Shaft Retainer Screw
0612	Anti-Reverse Pawl Pin
0613	Anti-Reverse Pawl
0661	Magnet Retainer Spring
0664	Spacer (B)
0766	Dial Friction Washer
0770	Handle Nut Plate Screw
0780	Magnet Retainer Lock
0796	Handle Nut Plate
0797	Handle Nut

**BNT # DESCRIPTION**

0799	Friction Washer
0801	Cast Control Cap
0802	Spool Tension Spacer (B)
0803	Spool Tension Spacer (A)
0807	Drive Shaft Bearing
0808	Friction Washer (B)
0816	Drive Shaft Washer
0819	Drive Shaft Bushing
0824	Yoke Plate Washer (B)
0825	Yoke Plate Washer (A)
0830	Spacer (Optional)
0834	Level Wind Guard
0838	Magnetic Control Dial
0853	Handle Assembly
0880	Spool Shaft Bushing (C)
0936	Anti-Reverse Ratchet
0940	Drive Shaft Retainer
0942	Worm Bearing
0961	Key Washer "B"
0994	Retractor Spring Pin

**BNT # DESCRIPTION**

1010	Spool Tension Spring
1011	Spool Shaft Bushing (A)
1027	Level Wind Protector
1030	Yoke
1032	Clutch Button
1033	One-Piece Frame
1035	Dial Case
1039	Line Guide
1044	Left Side Plate Screw
1045	Star Drag
1046	Bearing Holder
1048	Drive Gear
1049	Drive Shaft
1050	Pinion Gear
1054	Right Side Plate
1055	Thumb Rest
1057	Left Side Plate
1073	Idle Gear
1074	Worm Shaft
1075	Magnet Retainer