



1989 Model



### EXPLODED PARTS VIEW

**Bantam TX 100 Mag**

### PARTS LIST

**PART # DESCRIPTION**

- BNT 0015 Drag Spring Washer
- BNT 0016 Friction Washer (C)
- BNT 0042 Line Guide Pawl
- BNT 0133 Worm Shaft Retainer
- BNT 0151 Pawl Cap
- BNT 0184 Magnet Retainer Lock
- BNT 0194 Ball Bearing
- BNT 0291 Side Plate Screw
- BNT 0425 Clutchbutton Lock
- BNT 0604 Yoke Spring
- BNT 0612 Anti-Reverse Pawl Pin
- BNT 0660 Spring Spacer
- BNT 0661 Magnet Retainer Spring
- BNT 0664 Spacer (B)
- BNT 0706 Magnet Retainer
- BNT 0766 Dial Friction Washer
- BNT 0795 Handle Nut Plate Screw
- BNT 0796 Handle Nut Plate
- BNT 0797 Handle Nut
- BNT 0798 Handle Assembly
- BNT 0799 Friction Washer

**PART # DESCRIPTION**

- BNT 0800 Star Drag
- BNT 0801 Cast Control Cap
- BNT 0802 Spool Tension Spacer (B)
- BNT 0803 Spool Tension Spacer (A)
- BNT 0804 Spool Tension Spring
- BNT 0805 Spool Shaft Bushing (A)
- BNT 0806 Right Side Plate
- BNT 0807 Drive Shaft Bearing
- BNT 0808 Friction Washer (B)
- BNT 0809 Key Washer (A)
- BNT 0810 Drag Washer (A)
- BNT 0811 Drive Gear
- BNT 0812 Drag Washer (B)
- BNT 0813 Key Washer (B)
- BNT 0814 Anti-Reverse Ratchet
- BNT 0815 Drive Shaft
- BNT 0816 Drive Shaft Washer
- BNT 0817 Multi Purpose Screw
- BNT C818 Drive Shaft Retainer
- BNT 0819 Drive Shaft Bushing
- BNT 0820 Pinion Gear

**PART # DESCRIPTION**

- BNT 0821 Yoke
- BNT 0822 Retractor Spring Pin
- BNT 0823 Retractor Spring
- BNT 0824 Yoke Plate Washer (B)
- BNT 0825 Yoke Plate Washer (A)
- BNT 0826 Clutch Button
- BNT 0827 Worm Shaft
- BNT 0828 Worm Bearing
- BNT 0829 Anti-Reverse Pawl
- BNT 0830 Spacer (Optional)
- BNT 0831 Line Guide
- BNT 0832 Level Wind Protector
- BNT 0833 One-Piece Frame
- BNT 0834 Level Wind Guard
- BNT 0835 Spool Shaft Bushing (B)
- BNT 0836 Spool
- BNT 0837 Dial Case
- BNT 0838 Magnetic Control Dial
- BNT 0839 Left Side Plate
- BNT 0840 Left Side Plate Screw