


SHIMANO

Bantam

22BTMHR

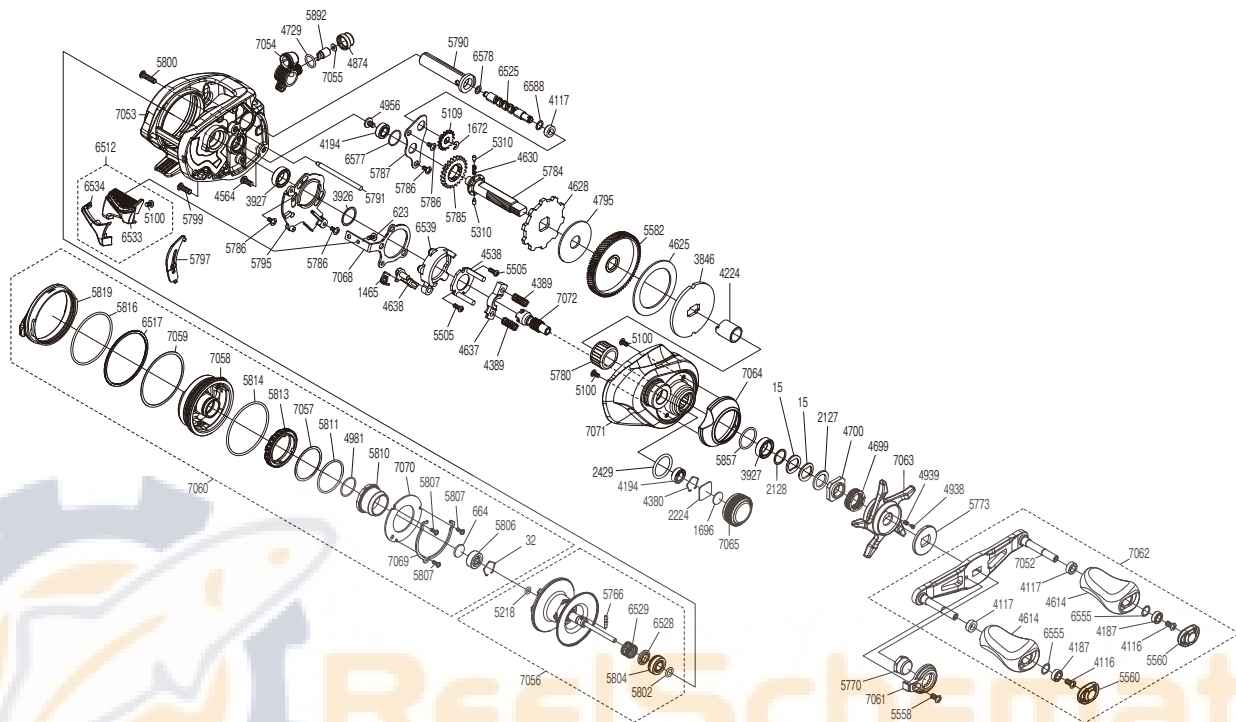

(51RL503A30X)

The (5804) Bearing, (5766) Spool clutch pin, and (5780) Roller clutch cannot be replaced by the customer. Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4939	Click Spring	BNT5857	O Ring
BNT0032	Bearing Retainer	BNT4956	Screw	BNT5892	Line Guide Pawl
BNT0623	Screw	BNT4981	O Ring	BNT6512	Clutch Button Assembly
BNT0664	Spacer B	BNT5100	Screw	BNT6517	Washer
BNT1465	Clutch Pawl Spring	BNT5109	Idle Gear	BNT6525	Worm Shaft
BNT1672	E Lock	BNT5218	O Ring	BNT6528	Bushing
BNT1696	Cast Control Spacer	BNT5310	Idle Gear Pin	BNT6529	Bearing Pressure Spring
BNT2127	Star Drag Spacer	BNT5505	Screw	BNT6533	Clutch Button
BNT2128	Bearing Washer	BNT5558	Screw	BNT6534	Clutch Button Cover
BNT2224	Cast Control Spacer	BNT5560	Handle Knob Seal	BNT6539	Clutch Cam
BNT2429	O Ring	BNT5582	Drive Gear	BNT6555	Washer
BNT3846	Pressure Plate	BNT5766	Spool Clutch Pin	BNT6577	O Ring
BNT3926	Washer	BNT5770	Handle Nut	BNT6578	Washer
BNT3927	Ball Bearing	BNT5773	Star Drag Click Plate	BNT6588	Washer
BNT4116	Screw	BNT5780	Roller Clutch Bearing	BNT7052	Handle Shank Assembly
BNT4117	Bushing	BNT5784	Drive Shaft	BNT7053	Frame Assembly
BNT4187	Ball Bearing	BNT5785	Idle Gear	BNT7054	Line Guide Pawl Holder Assembly
BNT4194	Ball Bearing	BNT5786	Screw	BNT7055	Washer
BNT4224	Roller Clutch Inner Tube	BNT5787	Drive Shaft Retainer	BNT7056	Spool Assembly (With Bearing)
BNT4380	Retainer	BNT5790	Level Wind Guard	BNT7057	Washer
BNT4389	Yoke Spring	BNT5791	Level Wind Guide	BNT7058	Dial Case Assembly
BNT4538	Clutch Cam Retainer	BNT5795	Clutch Guard	BNT7059	Washer
BNT4564	Screw	BNT5797	Clutch Bar Guide	BNT7060	Left Side Plate Assembly
BNT4614	Handle Knob	BNT5799	Screw	BNT7061	Handle Nut Plate
BNT4625	Drag Washer	BNT5800	Screw	BNT7062	Handle Assembly
BNT4628	Anti-Reverse Ratchet	BNT5802	O Ring	BNT7063	Star Drag
BNT4630	Idle Gear Spring	BNT5804	Ball Bearing	BNT7064	Clutch Button Attachment
BNT4637	Yoke	BNT5806	Ball Bearing	BNT7065	Cast Control Cap
BNT4638	Clutch Pawl	BNT5807	Screw	BNT7068	Clutch Plate
BNT4699	Star Drag Spring	BNT5810	Brake Pipe Gear Assembly	BNT7069	Cam Lever Retainer
BNT4700	Star Drag Nut	BNT5811	O Ring	BNT7070	Br Dial Retainer Plate
BNT4729	O Ring	BNT5813	Br Dial	BNT7071	Right Side Plate
BNT4795	Drag Washer	BNT5814	O Ring	BNT7072	Pinion Gear
BNT4874	Pawl Cap	BNT5816	O Ring		
BNT4938	Click Pin	BNT5819	Left Side Plate Cam Lever	BNT4692	B-100 Oil (accessory)