



1989 Model



EXPLODED PARTS VIEW

Bantam
Black Magnum 100ULS

PARTS LIST

PART #	DESCRIPTION	PART #	DESCRIPTION	PART #	DESCRIPTION
BNT 0015	Drag Spring Washer	BNT 0801	Cast Control Cap	BNT 0828	Worm Bearing
BNT 0016	Friction Washer (C)	BNT 0802	Spool Tension Spacer (B)	BNT 0829	Anti-Reverse Pawl
BNT 0042	Line Guide Pawl	BNT 0803	Spool Tension Spacer (A)	BNT 0830	Spacer (Optional)
BNT 0133	Worm Shaft Retainer	BNT 0804	Spool Tension Spring	BNT 0831	Line Guide
BNT 0151	Pawl Cap	BNT 0805	Spool Shaft Bushing (A)	BNT 0835	Spool Shaft Bushing (B)
BNT 0184	Magnet Retainer Lock	BNT 0807	Drive Shaft Bearing	BNT 0837	Dial Case
BNT 0191	Side Plate Screw	BNT 0808	Friction Washer (B)	BNT 0838	Magnetic Control Dial
BNT 0194	Ball Bearing	BNT 0809	Key Washer (A)	BNT 0853	Handle Assembly
BNT 0291	Side Plate Screw	BNT 0810	Drag Washer (A)	BNT 0854	Flipping Lever
BNT 0425	Clutchbutton Lock	BNT 0811	Drive Gear	BNT 0855	Right Side Plate
BNT 0589	Flipping Lever Screw	BNT 0812	Drag Washer (B)	BNT 0856	Cam Spring
BNT 0590	Lock Washer	BNT 0813	Key Washer (B)	BNT 0857	Flipping Cam
BNT 0604	Yoke Spring	BNT 0814	Anti-Reverse Ratchet	BNT 0858	Joint Plate
BNT 0612	Anti-Reverse Pawl Pin	BNT 0815	Drive Shaft	BNT 0859	Flipping Retractor Spring
BNT 0660	Spring Spacer	BNT 0816	Drive Shaft Washer	BNT 0860	Yoke Plate Washer (B)
BNT 0661	Magnet Retainer Spring	BNT 0817	Multi Purpose Screw	BNT 0861	Worm Shaft
BNT 0664	Spacer (B)	BNT 0818	Drive Shaft Retainer	BNT 0862	Stabilizer Bar
BNT 0706	Magnet Retainer	BNT 0819	Drive Shaft Bushing	BNT 0863	Level Wind Protector
BNT 0766	Dial Friction Washer	BNT 0820	Pinion Gear	BNT 0864	One-Piece Frame
BNT 0795	Handle Nut Plate Screw	BNT 0821	Yoke	BNT 0865	Level Wind Guard
BNT 0796	Handle Nut Plate	BNT 0823	Retractor Spring	BNT 0866	Spool
BNT 0797	Handle Nut	BNT 0825	Yoke Plate Washer (A)	BNT 0867	Left Side Plate
BNT 0799	Friction Washer	BNT 0826	Clutch Button	BNT 0868	Left Side Plate Screw
BNT 0800	Star Drag				