



### EXPLODED PARTS VIEW

Bantam *Black Magnum*  
BKM-200FS

### PARTS LIST

PART #	DESCRIPTION	PART #	DESCRIPTION	PART #	DESCRIPTION
BNT 0009	Spacer (A)	BNT 0589	Flipping Lever Screw	BNT 0623	Dial Case Screw
BNT 0014	Friction Washer (B)	BNT 0590	Lock Washer	BNT 0624	Screw Support
BNT 0015	Drag Spring Washer	BNT 0591	Flipping Lever	BNT 0657	Clutch Button Guide Pin
BNT 0016	Friction Washer (C)	BNT 0593	Cam Spring	BNT 0658	Flipping Retractor Spring
BNT 0032	Bearing Retainer	BNT 0594	Flipping Cam	BNT 0660	Spring Spacer
BNT 0042	Line Guide Pawl	BNT 0595	Joint Plate	BNT 0661	Magnet Retainer Spring
BNT 0060	Spacer (Optional)	BNT 0596	Retractor Spring	BNT 0701	Thrust Washer Spacer (Optional)
BNT 0124	Spool Shaft Bearing	BNT 0597	Retractor Spring Guide	BNT 0706	Magnet Retainer
BNT 0133	Worm Shaft Retainer	BNT 0598	Bushing	BNT 0707	Dial Case
BNT 0184	Magnet Retainer Lock	BNT 0599	Drive Gear	BNT 0708	Magnet Control Dial
BNT 0188	O Ring	BNT 0600	Idle Gear	BNT 0720	Handle Nut Plate Screw
BNT 0194	Ball Bearing	BNT 0602	Drive Shaft Washer "C"	BNT 0721	Handle Nut Plate
BNT 0267	Cast Control Cap	BNT 0603	Pinion Gear	BNT 0722	Handle Assembly
BNT 0277	Spacer (B)	BNT 0604	Yoke Spring	BNT 0723	Friction Washer "A"
BNT 0281	Handle Nut	BNT 0605	Yoke	BNT 0724	Pre-Set Dial
BNT 0291	Side Plate Screw	BNT 0606	Clutch Button	BNT 0725	Pre-Set Nut
BNT 0345	Drive Shaft Washer "B"	BNT 0607	Switch Spring Pin	BNT 0726	Pre-Set Spring
BNT 0356	Worm Bearing "A"	BNT 0608	Switch Spring	BNT 0727	Strike
BNT 0358	Pawl Cap	BNT 0609	Drive Shaft Retainer Screw	BNT 0728	Pre-Set Washer
BNT 0425	Clutchbutton Lock	BNT 0610	Drive Shaft Retainer	BNT 0729	Strike Spring
BNT 0489	Key Washer "A"	BNT 0611	Drive Shaft Bushing	BNT 0730	Strike Ball
BNT 0490	Drag Washer	BNT 0612	Anti-Reverse Pawl Pin	BNT 0731	Star Drag
BNT 0492	Key Washer "B"	BNT 0613	Anti-Reverse Pawl	BNT 0732	Drive Shaft Cam
BNT 0493	Anti-Reverse Ratchet	BNT 0615	Bearing Retainer	BNT 0733	Right Side Plate
BNT 0583	Drive Shaft Bearing	BNT 0616	Line Guide	BNT 0734	Drive Shaft
BNT 0584	Left Side Plate Bolt "C"	BNT 0617	Thumb Rest	BNT 0735	One-Piece Frame
BNT 0585	Anti-Reverse Switch	BNT 0618	Worm Shaft	BNT 0736	Spool
BNT 0586	Bolt Retainer	BNT 0619	Level Wind Guard	BNT 0737	Left Side Plate
BNT 0587	Left Side Plate Bolt "A"	BNT 0620	Stabilizer Bar	BNT 0766	Dial Friction Washer
BNT 0588	Spool Shaft Bushing	BNT 0621	Worm Bearing "B"		