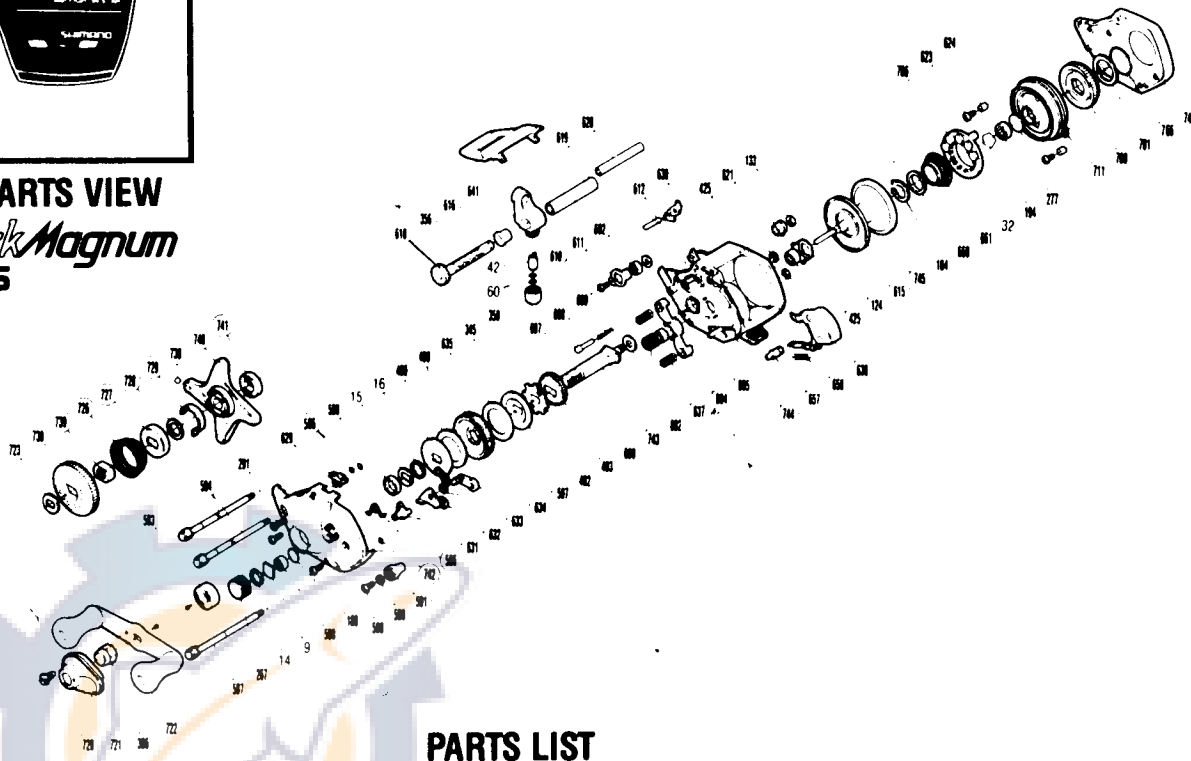


**EXPLODED PARTS VIEW****Bantam *Black Magnum*  
BKM-201FS****PARTS LIST**

PART #	DESCRIPTION	PART #	DESCRIPTION	PART #	DESCRIPTION
BNT 0009	Spacer (A)	BNT 0590	Lock Washer	BNT 0639	Anti-Reverse Pawl
BNT 0014	Friction Washer (B)	BNT 0591	Flipping Lever	BNT 0641	Thumb Rest
BNT 0015	Drag Spring Washer	BNT 0597	Retractor Spring Guide	BNT 0657	Clutch Button Guide Pin
BNT 0016	Friction Washer (C)	BNT 0598	Bushing	BNT 0658	Flipping Retractor Spring
BNT 0032	Bearing Retainer	BNT 0600	Idle Gear	BNT 0660	Spring Spacer
BNT 0042	Line Guide Pawl	BNT 0602	Drive Shaft Washer "C"	BNT 0661	Magnet Retainer Spring
BNT 0060	Spacer (Optional)	BNT 0604	Yoke Spring	BNT 0701	Thrust Washer Spacer (Optional)
BNT 0124	Spool Shaft Bearing	BNT 0605	Yoke	BNT 0702	Dial "O" Ring
BNT 0133	Worm Shaft Retainer	BNT 0607	Switch Spring Pin	BNT 0706	Magnet Retainer
BNT 0184	Magnet Retainer Lock	BNT 0608	Switch Spring	BNT 0708	Magnet Control Dial
BNT 0188	O Ring	BNT 0609	Drive Shaft Retainer Screw	BNT 0711	Dial Case
BNT 0194	Ball Bearing	BNT 0610	Drive Shaft Retainer	BNT 0720	Handle Nut Plate Screw
BNT 0267	Cast Control Cap	BNT 0611	Drive Shaft Bushing	BNT 0721	Handle Nut Plate
BNT 0277	Spacer (B)	BNT 0612	Anti-Reverse Pawl Pin	BNT 0722	Handle Assembly
BNT 0291	Side Plate Screw	BNT 0615	Bearing Retainer	BNT 0723	Friction Washer "A"
BNT 0306	Handle Nut	BNT 0616	Line Guide	BNT 0726	Pre-Set Spring
BNT 0345	Drive Shaft Washer "B"	BNT 0618	Worm Shaft	BNT 0727	Strike
BNT 0356	Worm Bearing "A"	BNT 0619	Level Wind Guard	BNT 0728	Pre-Set Washer
BNT 0358	Pawl Cap	BNT 0620	Stabilizer Bar	BNT 0729	Strike Spring
BNT 0425	Clutchbutton Lock	BNT 0621	Worm Bearing "B"	BNT 0730	Strike Ball
BNT 0489	Key Washer "A"	BNT 0623	Dial Case Screw	BNT 0738	Pre-Set Dial
BNT 0490	Drag Washer	BNT 0624	Screw Support	BNT 0739	Pre-Set Nut
BNT 0492	Key Washer "B"	BNT 0629	Anti-Reverse Switch	BNT 0740	Star Drag
BNT 0493	Anti-Reverse Ratchet	BNT 0631	Cam Spring	BNT 0741	Drive Shaft Cam
BNT 0583	Drive Shaft Bearing	BNT 0632	Flipping Cam	BNT 0742	Left Side Plate
BNT 0584	Left Side Plate Bolt "C"	BNT 0633	Joint Plate	BNT 0743	Drive Shaft
BNT 0586	Bolt Retainer	BNT 0634	Retractor Spring	BNT 0744	One-Piece Frame
BNT 0587	Left Side Plate Bolt "A"	BNT 0635	Drive Gear	BNT 0745	Spool
BNT 0588	Spool Shaft Bushing	BNT 0637	Pinion Gear	BNT 0746	Right Side Plate
BNT 0589	Flipping Lever Screw	BNT 0638	Clutch Button		