


SHIMANO

CALCUTTA CONQUEST

SA-RB

21CQ200

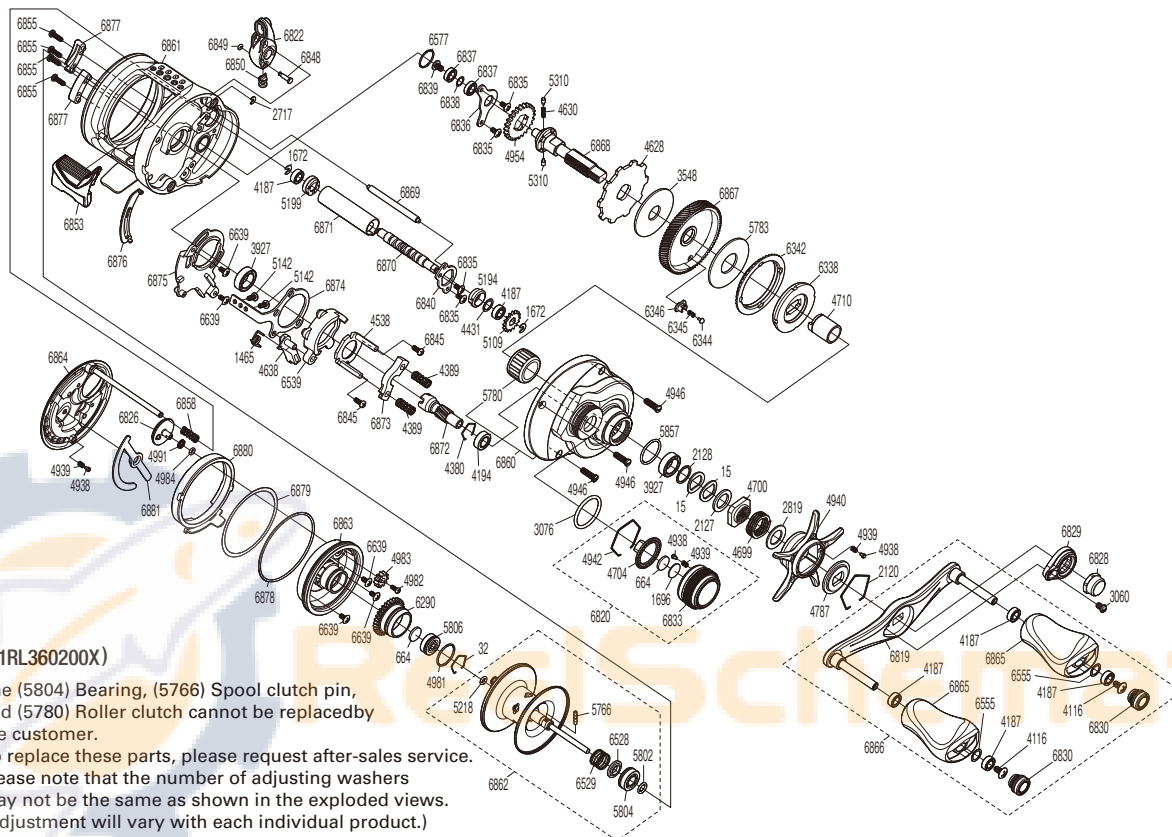

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4982	Screw	BNT6835	Screw
BNT0032	Bearing Retainer	BNT4983	Br Dial Gear	BNT6836	Drive Shaft Retainer
BNT0664	Washer	BNT4984	O Ring	BNT6837	Ball Bearing
BNT1465	Clutch Pawl Spring	BNT4991	Washer	BNT6838	Washer
BNT1672	E Lock	BNT5109	Idle Gear	BNT6839	Screw
BNT1696	Cast Control Spacer	BNT5142	Screw	BNT6840	Worm Bushing Retainer
BNT2120	Click Plate Retainer	BNT5194	Worm Bushing A	BNT6845	Screw
BNT2127	Star Drag Spacer	BNT5199	Worm Bushing B	BNT6848	Oscillating Slider Retainer
BNT2128	Bearing Washer	BNT5218	O Ring	BNT6849	O Ring
BNT2717	E Lock	BNT5310	Idle Gear Pin	BNT6850	Line Guide Pawl
BNT2819	Washer	BNT5766	Spool Clutch Pin	BNT6853	Clutch Button Assembly
BNT3060	Screw	BNT5780	Roller Clutch Bearing	BNT6855	Screw
BNT3076	O Ring	BNT5783	Drag Washer	BNT6858	Damper Spring
BNT3548	Drag Washer	BNT5802	O Ring	BNT6860	Right Side Plate Assembly
BNT3927	Ball Bearing	BNT5804	Ball Bearing	BNT6861	Frame Assembly
BNT4116	Screw	BNT5806	Ball Bearing	BNT6862	Spool Assembly(With Bearing)
BNT4187	Ball Bearing	BNT5857	O Ring	BNT6863	Dial Case Assembly
BNT4194	Ball Bearing	BNT6290	Brake Pipe Gear Assembly	BNT6864	Left Side Plate Assembly
BNT4380	Retainer	BNT6338	Key Washer	BNT6865	Handle Knob
BNT4389	Yoke Spring	BNT6342	Drag Click Ratchet	BNT6866	Handle Assembly
BNT4431	Washer	BNT6344	Drag Click	BNT6867	Drive Gear
BNT4538	Clutch Cam Retainer	BNT6345	Click Spring	BNT6868	Drive Shaft
BNT4628	Anti-Reverse Ratchet	BNT6346	Drag Click Pin Holder	BNT6869	Level Wind Guide
BNT4630	Idle Gear Spring	BNT6528	Bushing	BNT6870	Worm Shaft
BNT4638	Clutch Pawl	BNT6529	Bearing Pressure Spring	BNT6871	Level Wind Guard
BNT4699	Star Drag Spring	BNT6539	Clutch Cam	BNT6872	Pinion Gear
BNT4700	Star Drag Nut	BNT6555	Washer	BNT6873	Yoke
BNT4704	Cast Control Click Plate	BNT6577	O Ring	BNT6874	Clutch Plate
BNT4710	Roller Clutch Inner Tube	BNT6639	Screw	BNT6875	Clutch Guard
BNT4787	Star Drag Click Plate	BNT6819	Handle Shank Assembly	BNT6876	Clutch Bar Guide
BNT4938	Click Pin	BNT6820	Cast Control Cap Assembly	BNT6877	Brake Case Cam
BNT4939	Click Spring	BNT6822	Line Guide Pawl Holder Assembly	BNT6878	O Ring
BNT4940	Star Drag	BNT6826	Br Dial Assembly	BNT6879	Washer
BNT4942	Cast Control Click Holder	BNT6828	Handle Nut	BNT6880	Left Side Plate Cam Lever
BNT4946	Screw	BNT6829	Handle Retainer	BNT6881	Left Side Plate Seal
BNT4954	Idle Gear	BNT6830	Handle Knob Seal		
BNT4981	O Ring	BNT6833	Cast Control Cap	BNT4692	B-100 Oil (accessory)