



| BNT No. | PARTS NAMES | BNT No. | PARTS NAMES | BNT No. | PARTS NAMES |
|---------|-----------------------------|---------|--------------------------|---------|--------------------------|
| BNT0001 | Handle Nut Plate Screw | BNT1838 | Worm Shaft Spacer | BNT2497 | ID Plate Screw |
| BNT0015 | Drag Spring Washer | BNT2005 | Drive Gear | BNT2499 | Clutch Bar Support |
| BNT0032 | Bearing Retainer | BNT2007 | Pinion Gear | BNT2500 | Clutch Bar Guide (A) |
| BNT0042 | Line Guide Pawl | BNT2142 | Idle Gear (A) Spacer | BNT2503 | Line Guide |
| BNT0060 | Spacer (optional) | BNT2224 | Spool Tension Spacer (A) | BNT2504 | Pawl Cap |
| BNT0133 | Worm Shaft Retainer | BNT2396 | Roller Clutch Bearing | BNT2505 | Worm Bushing (B) |
| BNT0188 | "O" Ring | BNT2404 | Anti-Reverse Pawl | BNT2507 | Right Side ID Plate |
| BNT0194 | Ball Bearing | BNT2470 | Handle Nut Plate | BNT2547 | Handle Nut |
| BNT0425 | "E" Lock | BNT2471 | Handle Assembly | BNT2590 | Star Drag |
| BNT0586 | Bolt Retainer | BNT2473 | Star Drag Spacer | BNT2591 | Left Side Plate |
| BNT0609 | Clutch Cam Screw | BNT2474 | Roller Clutch Inner Tube | BNT2592 | Drive Shaft |
| BNT0664 | Spacer (B) | BNT2476 | Cast Control Cap | BNT2593 | Yoke |
| BNT0686 | "E" Lock | BNT2477 | Key Washer | BNT2594 | Clutch Cam |
| BNT0689 | Set Plate Screw | BNT2478 | Anti-Reverse Ratchet | BNT2595 | Clutch Pawl |
| BNT0799 | Friction Washer | BNT2480 | Idle Gear (A) | BNT2596 | Clutch Pawl Spring |
| BNT1133 | Yoke Spring | BNT2482 | Clutch Cam Retainer | BNT2597 | Clutch Plate |
| BNT1214 | Drag Washer (A) | BNT2486 | Clutch Pawl Pin | BNT2598 | Set Plate |
| BNT1227 | Clutch Pawl Spring Retainer | BNT2489 | Drive Shaft Bushing | BNT2599 | Worm Bushing (A) |
| BNT1252 | Left Side Plate Bolt Washer | BNT2490 | Idle Gear (C) | BNT2600 | One-Piece Frame |
| BNT1337 | Clutch Bar Support Spacer | BNT2491 | Worm Shaft | BNT2601 | Clutch Bar Guide (B) |
| BNT1424 | Drag Washer (C) | BNT2493 | Level Wind Guard | BNT2602 | Quick-Fire II Clutch Bar |
| BNT1672 | "E" Lock | BNT2494 | Level Wind Guide | BNT2603 | Right Side Plate |
| BNT1696 | Cast Control Spacer (B) | BNT2495 | Brake Collar | | |
| BNT1698 | Left Side Plate Bolt | BNT2496 | Spool Assembly | | |