



CARDIFF
400A DS
A-RB

(1RH532400U)

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0001	Screw	1934	Clutch Pawl Spring	2644	Worm Bushing A
0011	Screw	1936	Clutch Plate	2645	Level Wind Guard
0032	Bearing Retainer	1949	Screw	2646	Stabilizer Bar
0042	Line Guide Pawl	1965	Idle Gear A	2648	Idle Gear A Bush
0133	E Lock	1969	Idle Gear B	2649	Screw
0188	O Ring	1973	Click Plate	2650	Clutch Button Support Bar
0425	E Lock	1975	Click Switch Spring	2652	Screw
0664	Spacer B	1976	Click Shaft	2653	Idle Gear B Shaft
0686	E Lock	1978	Click Pawl	2654	Worm Shaft
0799	Friction Washer	2050	Clutch Cam Retainer	2655	Click Spring
0816	Washer	2224	Spool Tension Spacer A	2797	Yoke
0830	Spacer	2238	Screw	2927	Ball Bearing
1133	Yoke Spring	2267	Worm Bushing B	2929	Ball Bearing
1201	Retractor Spring Collar	2296	Return Pin Guide	3095	Handle Assembly
1227	Push Nut (SPN-2)	2301	Clutch Cam	3096	Star Drag
1245	Spacer	2302	Clutch Pawl	3097	Roller Clutch Inner Tube
1354	Screw	2417	Handle Nut	3098	Side Plate Nut
1455	Drag Spring Washer H	2470	Handle Nut Plate	3099	Right Side Plate
1472	Anti-Reverse Pawl	2476	Cast Control Cap	3100	Roller Clutch Assembly
1560	Pawl Cap	2511	Washer	3101	Set Plate
1613	Drag Spring Washer L	2512	Screw	3102	Spool Assembly
1616	Screw	2514	O Ring	3103	Clutch Button Guide A
1618	Key Washer C	2516	Drag Washer AG	3104	Clutch Button Guide B
1620	Eared Washer	2517	Drag Washer CG	3105	Quick-Fire II Clutch Bar
1672	E Lock	2518	Drag Washer BG	3106	One-Piece Frame
1696	Cast Control Spacer B	2519	Drive Gear	3107	Line Guide
1853	Key Washer A	2520	Drive Shaft Washer B	3108	Click Switch
1927	Anti-Reverse Ratchet	2521	Drive Shaft	3109	Left Side Plate
1930	Screw	2522	Pinion Gear	3110	Side I.D. Plate
1931	Retractor Spring	2575	Brake Collar	3130	Washer