



# Catala™

## 300 01

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0009	Spacer (A)	1673	Handle Nut Plate	2510	Right Side Plate Nut
0031	Ball Bearing	1696	Cast Control Spacer (B)	2511	Side Plate Nut Washer
0042	Line Guide Pawl	1697	Spool Tension Spring	2512	Right Side Plate Screw
0133	Worm Shaft Retainer	1853	Key Washer (A)	2514	"O" Ring
0188	"O" Ring	1927	Anti-Reverse Ratchet	2515	Cast Control Bushing
0194	Ball Bearing	1930	Clutch Cam Screw	2516	Drag Washer (AG)
0425	"E" Lock	1931	Retractor Spring	2517	Drag Washer (CG)
0664	Spacer (B)	1934	Clutch Pawl Spring	2518	Drag Washer (BG)
0686	"E" Lock	1936	Clutch Plate	2519	Drive Gear
0795	Handle Nut Plate Screw	1938	Idle Gear (C)	2520	Drive Shaft Washer (B)
0797	Handle Nut	1948	Brake Collar	2521	Drive Shaft
0799	Friction Washer	1949	I.D. Plate Screw	2522	Pinion Gear
0816	Shaft Washer	2050	Clutch Cam Retainer	2523	Set Plate
0830	Spacer (optional)	2070	Idle Gear (B)	2527	Line Guide
1092	Pawl Cap	2098	Cast Control Cap	2529	Clutch Button Guide (A)
1133	Yoke Spring	2238	Bush Plate Screw	2531	Clutch Button Guide (B)
1201	Retractor Spring Collar	2242	Roller Clutch Inner Tube	2534	Left Side Plate
1227	Push Nut (SPN-2)	2249	Bearing Retainer	2535	Left Side I.D. Plate
1245	Clutch Bar Support Spacer	2267	Worm Bushing (B)	2536	Right Side Plate
1455	Drag Spring Washer (H)	2295	Roller Clutch Assembly	2537	Worm Shaft
1472	Anti-Reverse Pawl	2296	Return Pin Guide	2538	Level Wind Guard
1613	Drag Spring Washer (L)	2299	Idle Gear (A)	2539	Stabilizer Bar
1616	Return Pin Guide Screw	2301	Clutch Cam	2540	Spool Assembly
1618	Key Washer (C)	2302	Clutch Pawl	2541	Clutch Button Support Bar
1620	Eared Washer	2508	Handle Assembly	2542	Quick-Fire II Clutch Bar
1627	Yoke	2509	Star Drag	2543	One-Piece Frame