



Catala™ 400 01

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0009	Spacer (A)	1697	Spool Tension Spring	2514	"O" Ring
0011	Click Plate Screw	1853	Key Washer (A)	2515	Cast Control Bushing
0031	Ball Bearing	1927	Anti-Reverse Ratchet	2516	Drag Washer (AG)
0042	Line Guide Pawl	1930	Clutch Cam Screw	2517	Drag Washer (CG)
0133	Worm Shaft Retainer	1931	Retractor Spring	2518	Drag Washer (BG)
0188	"O" Ring	1934	Clutch Pawl Spring	2519	Drive Gear
0194	Ball Bearing	1936	Clutch Plate	2520	Drive Shaft Washer (B)
0425	"E" Lock	1948	Brake Collar	2521	Drive Shaft
0664	Spacer (B)	1949	I.D. Plate Screw (long)	2522	Pinion Gear
0686	"E" Lock	1965	Idle Gear (A)	2523	Set Plate
0795	Handle Nut Plate Screw	1969	Idle Gear (B)	2527	Line Guide
0797	Handle Nut	1973	Click Plate	2529	Clutch Button Guide (A)
0799	Friction Washer	1974	Click Switch Washer	2531	Clutch Button Guide (B)
0816	Shaft Washer	1975	Click Switch Spring	2542	Quick-Fire II Clutch Bar
0830	Spacer (optional)	1976	Click Shaft	2643	Right Side Plate
1092	Pawl Cap	1978	Click Pawl	2644	Worm Bushing (A)
1133	Yoke Spring	2050	Clutch Cam Retainer	2645	Level Wind Guard
1201	Retractor Spring Collar	2098	Cast Control Cap	2646	Stabilizer Bar
1227	Push Nut (SPN-2)	2238	Bush Plate Screw	2647	Spool Assembly
1245	Clutch Bar Support Spacer	2242	Roller Clutch Inner Tube	2648	Idle Gear (A) Bush
1354	Click Switch Screw	2267	Worm Bushing (B)	2649	Bearing Screw
1455	Drag Spring Washer (H)	2295	Roller Clutch Assembly	2650	Clutch Button Support Bar
1472	Anti-Reverse Pawl	2296	Return Pin Guide	2651	One-Piece Frame
1613	Drag Spring Washer (L)	2301	Clutch Cam	2652	I.D. Plate Screw (short)
1616	Return Pin Guide Screw	2302	Clutch Pawl	2653	Idle Gear (B) Shaft
1618	Key Washer (C)	2508	Handle Assembly	2654	Worm Shaft
1620	Eared Washer	2509	Star Drag	2655	Click Spring
1627	Yoke	2510	Right Side Plate Nut	2656	Click Switch
1673	Handle Nut Plate	2511	Side Plate Nut Washer	2657	Left Side Plate
1696	Cast Control Spacer (B)	2512	Right Side Plate Screw	2658	Left Side I.D. Plate