



**Bantam
CHRONARCH
100 91**

TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	1010	Spool Tention Spring	1126	Worm Shaft
0016	Friction Washer (C)	1092	Pawl Cap	1127	Worm Bearing
0031	Drive Shaft Bearing (A)	1101	Handle Nut Cover	1128	Anti-Reverse Pawl Pin (B)
0042	Line Guide Pawl	1102	Twin Power Handle Assembly	1129	Anti-Reverse Pawl
0133	Worm Shaft Retainer	1103	Friction Washer (A)	1130	Line Guide
0191	Right Side Plate Screw	1104	Click Gear	1131	Stabilizer Bar
0194	Ball Bearing	1105	Star Drag	1132	Pinion Gear
0425	Drive Shaft Lock	1106	Star Drag Spring	1133	Yoke Spring
0489	Key Washer (A)	1107	Star Drag Nut	1134	Yoke
0490	Drag Washer (B)	1108	Bearing Holder	1135	Yoke Spacer
0586	Bolt Retainer	1109	Side Plate Bolt (A)	1136	Clutch Cam
0590	Lock Washer	1110	Side Plate Bolt (B)	1137	Clutch Pawl
0609	Clutch Plate Retainer Screw	1111	Cast Control Cap	1138	Clutch Pawl Spring
0612	Anti-Reverse Pawl Pin (A)	1112	Spool Shaft Bushing	1139	Joint Plate
0661	Magnet Retainer Spring	1113	Flipping Lever Screw	1140	Clutch Plate
0664	Spacer (B)	1114	Flipping Lever	1141	Retractor Spring
0766	Dial Friction Washer	1115	Right Side Plate	1142	Thumb Rest
0770	Handle Nut Cover Screw	1116	Cam Spring	1143	Thumb Rest Support
0780	Magnet Retainer Lock	1117	Flipping Cam	1144	One-Piece Frame
0797	Handle Nut	1118	Drive Gear	1145	Quick-Fire II Clutch Bar
0802	Spool Tention Spacer (B)	1119	Drag Washer (A)	1146	Spool Assembly
0803	Spool Tention Spacer	1120	Anti-Reverse Ratchet	1147	Dial Case
0807	Drive Shaft Bearing (B)	1121	Anti-Reverse Pawl Spring (B)	1148	Magnetic Control Dial
0808	Friction Washer (B)	1122	Anti-Reverse Pawl Spring (B)	1149	Left Side Plate
0816	Drive Shaft Washer	1123	Idle Gear	1179	Handle Assembly (spare)
0817	Multi Purpose Screw	1124	Drive Shaft	1201	Retractor Spring Collar
0830	Spacer (optional)	1125	Drive Shaft Retainer	1202	Magnetic Retainer
0834	Level Wind Guard				