



**Bantam
CHRONARCH
200 91**

TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	1092	Pawl Cap	1130	Line Guide
0016	Friction Washer (C)	1101	Handle Nut Cover	1132	Pinion Gear
0031	Drive Shaft Bearing (A)	1102	Twin Power Handle Assembly	1133	Yoke Spring
0042	Line Guide Pawl	1103	Friction Washer (A)	1134	Yoke
0133	Worm Shaft Retainer	1104	Click Gear	1135	Yoke Spacer
0191	Right Side Plate Screw	1105	Star Drag	1136	Clutch Cam
0194	Ball Bearing	1106	Star Drag Spring	1137	Clutch Pawl
0425	Drive Shaft Lock	1107	Star Drag Nut	1138	Clutch Pawl Spring
0489	Key Washer (A)	1108	Bearing Holder	1139	Joint Plate
0490	Drag Washer (B)	1111	Cast Control Cap	1140	Clutch Plate
0586	Bolt Retainer	1112	Spool Shaft Bushing	1141	Retractor Spring
0590	Lock Washer	1113	Flipping Lever Screw	1147	Dial Case
0609	Clutch Plate Retainer Screw	1114	Flipping Lever	1148	Magnetic Control Dial
0612	Anti-Reverse Pawl Pin (A)	1115	Right Side Plate	1149	Left Side Plate
0661	Magnet Retainer Spring	1116	Cam Spring	1150	Side Plate Bolt (A)
0664	Spacer (B)	1117	Flipping Casm	1151	Side Plate Bolt (B)
0766	Dial Friction Washer	1118	Drive Gear	1152	Worm Shaft
0770	Handle Nut Cover Screw	1119	Drag Washer (A)	1153	Stabilizer Bar
0780	Magnet Retainer Lock	1120	Anti-Reverse Ratchet	1154	Thumb Rest
0797	Handle Nut	1121	Anti-Reverse Pawl Spring (B)	1155	Thumb Rest Support
0802	Spool Tension Spacer (B)	1122	Anti-Reverse Pawl Spring (A)	1156	Level Wind Guard
0803	Spool Tension Spacer (A)	1123	Idle Gear	1157	One-Piece Frame
0807	Drive Shaft Bearing (B)	1124	Drive Shaft	1158	Quick-Fire II Clutch Bar
0808	Friction Washer (B)	1125	Drive Shaft Retainer	1159	Spool Assembly
0816	Drive Shaft Washer	1127	Worm Bearing	1179	Handle Assembly (spare)
0817	Multi Purpose Screw	1128	Anti-Reverse Pawl Pin (B)	1201	Retractor Spring Collar
0830	Spacer (optional)	1129	Anti-Reverse Pawl	1202	Magnet Retainer
1010	Spool Tension Spring				