

PART #	DESCRIPTION	"A" INTERCHANGEABILITY	"B" INTERCHANGEABILITY
BNT0015	Drag Spring Washer		
BNT0042	Line Guide Pawl		
BNT0194	Ball Bearing	BNT0084,TGT0184	
BNT0291	Right Side Plate Screw	BR 0046,RD 0345	BB 0061,BNT0191,KCB0052,MLX0049, RD 0050,X/Z0147
BNT0425	"E" Lock	BB 0037,BNT0234,BR 0326,RD 1673, TGT0042,TLDO137,TRNO001,TT 0096	BR 0117,RD 0476
BNT0490	Drag Washer (B)		
BNT0661	Magnet Retainer Spring		
BNT0664	Spacer (B)		
BNT0766	Dial Friction Washer		
BNT0760	Magnet Retainer Lock		
BNT0816	Drive Shaft Washer		
BNT0817	Multi Purpose Screw		
BNT0819	Drive Shaft Bushing		
BNT0830	Spacer (optional)		
BNT0838	Magnetic Control Dial		
BNT1092	Pawl Cap	TGT0227	BNT1230
BNT1103	Friction Washer (A)		
BNT1104	Click Gear		
BNT1106	Star Drag Spring		
BNT1112	Spool Shaft Bushing (A)		
BNT1119	Drag Washer (A)		
BNT1131	Stabilizer Bar		
BNT1143	Thumb Rest Support		
BNT1146	Spool Assembly		
BNT1162	Star Drag	BNT1105	
BNT1168	Drive Gear		
BNT1202	Magnet Retainer		
BNT1206	Roller Clutch Inner Tube		
BNT1207	Roller Clutch Bearing		
BNT1257	Dial Case		
BNT1364	Handle Assembly		BNT1397
BNT1365	Star Drag Nut		
BNT1366	Cast Control Cap Assembly		
BNT1367	Right Side Plate		
BNT1368	Side Plate Bolts Assembly		
BNT1369	Key Washer		
BNT1370	Anti-Reverse Ratchet		
BNT1371	Idle Gear		
BNT1372	Drive Shaft		
BNT1373	Drive Shaft Retainer		
BNT1374	Clutch Plate Washer		
BNT1375	Clutch Plate		
BNT1376	Worm Shaft Assembly		
BNT1377	Thumb Rest		
BNT1378	Line Guide		BNT1405
BNT1379	Level Wind Guard		
BNT1380	Pinion Gear		
BNT1381	Yoke		
BNT1382	Clutch Cam Retainer		
BNT1383	Clutch Cam		
BNT1384	Clutch Pawl		
BNT1385	Clutch Pawl Spring		
BNT1386	One-Piece Frame		
BNT1387	Quick-Fire II Clutch Bar		
BNT1388	Clutch Bar Support		
BNT1389	Left Side Plate		
BNT1419	Yoke Spring		