



TO ORDER: USE RD PREFIX
WITH PART NUMBER

PARTS LIST

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0015	Drag Spring Washer	0838	Magnetic Control Dial	1152	Worm Shaft
0016	Friction Washer (C)	0880	Spool Shaft Bushing (B)	1153	Stabilizer Bar
0042	Line Guide Pawl	1010	Spool Tension Spring	1155	Thumb Rest Support
0133	Worm Shaft Retainer	1092	Pawl Cap	1156	Levl Wind Guard
0291	Right Side Plate Screw	1103	Friction Washer (A)	1159	Spool Assembly
0425	Drive Shaft Lock	1106	Star Drag Spring	1160	Handle Nut Cover
0489	Key Washer (A)	1107	Star Drag Nut	1165	Cast Control Cap
0490	Drag Washer (B)	1108	Bearing Holder	1168	Drive Gear
0586	Bolt Retainer	1112	Spool Shaft Bushing (A)	1169	Pinion Gear
0589	Flipping Lever Screw	1114	Flipping Lever	1174	Side Plate Bolt (A)
0590	Lock Washer	1116	Cam Spring	1175	Side Plate Bolt (B)
0609	Clutch Plate Retainer Screw	1117	Flipping Cam	1178	Quick-Fire II Clutch Bar
0612	Anti-Reverse Pawl Pin	1119	Drag Washer (A)	1179	Handle Assembly
0661	Magnet Retainer Spring	1123	Idle Gear	1180	Star Drag
0664	Spacer (B)	1124	Drive Shaft	1183	Anti-Reverse Ratchet
0766	Dial Friction Washer	1125	Drive Shaft Retainer	1184	Anti-Reverse Pawl
0780	Magnet Retainer Lock	1127	Worm Bearing	1187	Dial Case
0795	Handle Nut Cover Screw	1133	Yoke Spring	1191	One-Piece Frame
0797	Handle Nut	1134	Yoke	1193	Anti-Reverse Switch
0802	Spool Tension Spacer (B)	1135	Yoke Spacer	1194	Line Guide
0803	Spool Tension Spacer (A)	1136	Clutch Cam	1196	Left Side Plate
0807	Drive Shaft Bearing (B)	1137	Clutch Pawl	1197	Right Side Plate
0808	Friction Washer (B)	1138	Clutch Pawl Spring	1198	Thumb Rest
0816	Drive Shaft Washer	1139	Joint Plate	1200	Star Drag Spacer
0817	Multi Purpose Screw	1140	Clutch Plate	1201	Retractor Spring Collar
0819	Drive Shaft Bushing	1141	Retractor Spring	1202	Magnet Retainer
0830	Spacer (optional)				