



TO ORDER: USE BNT PREFIX  
WITH PART NUMBER

**PARTS LIST**

| BNT # | DESCRIPTION                 | BNT # | DESCRIPTION             | BNT # | DESCRIPTION              |
|-------|-----------------------------|-------|-------------------------|-------|--------------------------|
| 0015  | Drag Spring Washer          | 0834  | Level Wind Guard        | 1139  | Joint Plate              |
| 0016  | Friction Washer (C)         | 0838  | Magnetic Control Dial   | 1140  | Clutch Plate             |
| 0042  | Line Guide Pawl             | 0880  | Spool Shaft Bushing (B) | 1141  | Retractor Spring         |
| 0133  | Worm Shaft Retainer         | 1010  | Spool Tension Spring    | 1143  | Thumb Rest Support       |
| 0291  | Right Side Plate Screw      | 1092  | Pawl Cap                | 1146  | Spool Assembly           |
| 0425  | Drive Shaft Lock            | 1103  | Friction Washer (A)     | 1160  | Handle Nut Cover         |
| 0489  | Key Washer (A)              | 1106  | Star Drag Spring        | 1163  | Side Plate Bolt (A)      |
| 0490  | Drag Washer (B)             | 1107  | Star Drag Nut           | 1164  | Side Plate Bolt (B)      |
| 0586  | Bolt Retainer               | 1108  | Bearing Holder          | 1165  | Cast Control Cap         |
| 0589  | Flipping Lever Screw        | 1112  | Spool Shaft Bushing (A) | 1168  | Drive Gear               |
| 0590  | Lock Washer                 | 1114  | Flipping Lever          | 1169  | Pinion Gear              |
| 0609  | Clutch Plate Retainer Screw | 1116  | Cam Spring              | 1172  | Quick Fire II Clutch Bar |
| 0612  | Anti-Reverse Pawl Pin       | 1117  | Flipping Cam            | 1179  | Handle Assembly          |
| 0661  | Magnet Retainer Spring      | 1119  | Drag Washer (A)         | 1180  | Star Drag                |
| 0664  | Spacer (B)                  | 1123  | Idle Gear               | 1183  | Anti-Reverse Ratchet     |
| 0786  | Dial Friction Washer        | 1124  | Drive Shaft             | 1184  | Anti-Reverse Pawl        |
| 0780  | Magnet Retainer Lock        | 1125  | Drive Shaft Retainer    | 1186  | One-Piece Frame          |
| 0795  | Handle Nut Cover Screw      | 1126  | Worm Shaft              | 1187  | Dial Case                |
| 0797  | Handle Nut                  | 1127  | Worm Bearing            | 1192  | Right Side Plate         |
| 0802  | Spool Tension Spacer (B)    | 1131  | Stabilizer Bar          | 1193  | Anti-Reverse Switch      |
| 0803  | Spool Tension Spacer (A)    | 1133  | Yoke Spring             | 1194  | Line Guide               |
| 0807  | Drive Shaft Bearing (B)     | 1134  | Yoke                    | 1195  | Thumb Rest               |
| 0808  | Friction Washer (B)         | 1135  | Yoke Spacer             | 1196  | Left Side Plate          |
| 0816  | Drive Shaft Washer          | 1136  | Clutch Cam              | 1200  | Star Drag Spacer         |
| 0817  | Multi Purpose Screw         | 1137  | Clutch Pawl             | 1201  | Retractor Spring Collar  |
| 0819  | Drive Shaft Bushing         | 1138  | Clutch Pawl Spring      | 1202  | Magnet Retainer          |
| 0830  | Spacer (optional)           |       |                         |       |                          |