



**Bantam
CRESTFIRE
CR-100⁹¹**

TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	0803	Spool Tension Spacer (A)	0825	Yoke Plate Washer (A)
0016	Friction Washer (C)	0804	Spool Tension Spring	0826	Clutch Button
0042	Line Guide Pawl	0805	Spool Shaft Bushing (A)	0827	Worm Shaft
0133	Worm Shaft Retainer	0807	Drive Shaft Bearing	0828	Worm Bearing
0151	Pawl Cap	0808	Friction Washer (B)	0829	Anti-Reverse Pawl
0184	Magnetic Retainer Lock	0809	Key Washer (A)	0830	Spacer (optional)
0291	Side Plate Screw	0810	Drag Washer (A)	0834	Level Wind Guard
0425	Drive Shaft Lock	0811	Drive Gear	0835	Spool Shaft Bushing (B)
0604	Yoke Spring	0812	Drag Washer (B)	0836	Spool
0612	Anti-Reverse Pawl Pin	0813	Key Washer (B)	0837	Dial Case
0660	Spring Spacer	0814	Anti-Reverse Ratchet	0838	Magnetic Control Dial
0661	Magnet Retainer Spring	0815	Drive Shaft	0840	Left Side Plate Screw
0664	Spacer (B)	0816	Drive Shaft Washer	0853	Handle Assembly
0706	Magnet Retainer	0817	Multi Purpose Screw	0875	Star Drag
0766	Dial Friction Washer	0818	Drive Shaft Retainer	0877	Line Guide
0795	Handle Nut Plate Screw	0819	Drive Shaft Bushing	0878	Level Wind Protector
0796	Handle Nut Plate	0820	Pinion Gear	0880	Spool Shaft Bushing (C)
0797	Handle Nut	0821	Yoke	1095	Right Side Plate
0799	Friction Washer (A)	0822	Retractor Spring Pin	1096	One-Piece Frame
0801	Cast Control Cap	0823	Retractor Spring	1097	Left Side Plate
0802	Spool Tension Spacer (A)	0824	Yoke Plate Washer (B)		