



**Bantam
CRESTFIRE
CR-101 91**

TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	0804	Spool Tension Spring	0835	Spool Shaft Bushing (B)
0016	Friction Washer (C)	0805	Spool Shaft Bushing (A)	0837	Dial Case
0042	Line Guide Pawl	0807	Drive Shaft Bearing	0838	Magnetic Control Dial
0133	Worm Shaft Retainer	0808	Friction Washer (B)	0840	Right Side Plate Screw
0151	Pawl Cap	0809	Key Washer (A)	0841	Handle Nut
0184	Magnet Retainer Lock	0810	Drag Washer (A)	0844	Drive Gear
0291	Side Plate Screw	0812	Drag Washer (B)	0845	Drive Shaft
0425	Drive Shaft Retainer	0813	Key Washer (B)	0846	Pinion Gear
0604	Yoke Spring	0814	Anti-Reverse Ratchet	0847	Retractor Spring
0612	Anti-Reverse Pawl Pin	0816	Drive Shaft Washer	0848	Clutch Button
0660	Spring Spacer	0817	Multi Purpose Screw	0849	Worm Shaft
0661	Magnet Retainer Spring	0818	Drive Shaft Retainer	0851	Spool
0664	Spacer (B)	0819	Drive Shaft Bushing	0853	Handle Assembly
0706	Magnet Retainer	0821	Yoke	0877	Line Guide
0766	Dial Friction Washer	0822	Retractor Spring Pin	0878	Level Wind Protector
0795	Handle Nut Plate Screw	0824	Yoke plate Washer (B)	0880	Spool Shaft Bushing (C)
0796	Handle Nut Plate	0825	Yoke Plate Washer (A)	0882	Star Drag
0799	Friction Washer (A)	0828	Worm Bearing	1098	Left Side Plate
0801	Cast Control Cap	0829	Anti-Reverse Pawl	1099	One-Piece Frame
0802	Spool Tension Spacer (B)	0830	Spacer (optional)	1100	Right Side Plate
0803	Spool Tension Spacer (A)	0834	Level Wind Guard		