



Bantam CRESTFIRE CR-200 94

CR200A

PART #	DESCRIPTION	PART #	DESCRIPTION	PART #	DESCRIPTION
BNT0015	Drag Spring Washer	BNT1450	Star Drag	BNT1468	Level Wind Protector
BNT0042	Line Guide Pawl	BNT1451	Cast Control Cap Assembly	BNT1469	Line Guide
BNT0425	Drive Gear Retainer	BNT1452	Side Palte Screws	BNT1470	Thumb Rest
BNT0661	Magnet Retainer Spring	BNT1453	Right Side Plate	BNT1471	Drive Shaft Cover
BNT0664	Spacer (B)	BNT1454	Bearing Bushing	BNT1472	Anti-reverse Pawl
BNT0799	Friction Washer	BNT1455	Drag Spring Washer	BNT1473	Multi Purpose Screw
BNT0807	Drive Shaft Bearing	BNT1456	Drive Gear	BNT1474	One-Piece Frame
BNT0808	Friction Washer (B)	BNT1457	Drive Shaft Washer (B)	BNT1475	Quick-Fire II Clutch Bar
BNT0809	Key Washer	BNT1458	Anti-reverse Ratchet	BNT1476	Drive Shaft Washer (D)
BNT0810	Drag Washer	BNT1459	Drive Shaft	BNT1477	Spool
BNT0817	Multi Purpose Screw	BNT1460	Clutch Plate	BNT1478	Magnet Holder
BNT0819	Drive Shaft Bushing	BNT1461	Yoke	BNT1479	Magnet Retainer
BNT0820	Pinion Gear	BNT1462	Clutch Cam Retainer	BNT1480	Dial Case
BNT0830	Spacer (optional)	BNT1463	Clutch Cam	BNT1481	Magnetic Control Dial
BNT0835	Spool Shaft Bushing (B)	BNT1464	Clutch Pawl	BNT1482	Left Side Plate
BNT0880	Spool Shaft Bushing (C)	BNT1465	Clutch Pawl Spring	BNT1483	Lock Spring
BNT1092	Pawl Cap	BNT1466	Worm Shaft Assembly	BNT1484	Lock Screw Cap
BNT1419	Yoke Spring	BNT1467	Level Wind Guard	BNT1551	Dial Friction Washer
BNT1449	Handle Assembly				