



# Crysalis <sup>96</sup>

**CY200**

Part #	Description	Part #	Description	Part #	Description
BNT0015	Drag Spring Washer	BNT1092	Pawl Cap	BNT1475	Quick-Fire II Clutch Bar
BNT0042	Line Guide Pawl	BNT1419	Yoke Spring	BNT1476	Drive Shaft Washer (D)
BNT0194	Ball Bearing	BNT1450	Star Drag	BNT1478	Magnet Holder
BNT0291	Side Plate Screw	BNT1454	Bearing Bushing	BNT1479	Magnet Retainer
BNT0425	Drive Gear Retainer	BNT1455	Drag Spring Washer	BNT1480	Dial Case
BNT0661	Magnet Retainer Spring	BNT1456	Drive Gear	BNT1481	Magnet Control Dail
BNT0664	Spacer (B)	BNT1457	Drive Shaft Washer (B)	BNT1883	Lock Spring
BNT0795	Handle Nut Plate Screw	BNT1458	Anti-Reverse Ratchet	BNT1484	Lock Screw Cap
BNT0797	Handle Nut	BNT1459	Drive Shaft	BNT1551	Dial Friction Washer
BNT0799	Friction Washer	BNT1460	Clutch Plate	BNT1606	Spool
BNT0801	Cast Control Cap	BNT1461	Yoke	BNT1666	Spool Tension Spacer (A)
BNT0802	Spool Tension Spacer (B)	BNT1462	Clutch Cam Retainer	BNT1667	Worm Gear
BNT0804	Spool Tension Spring	BNT1463	Clutch Cam	BNT1668	Worm Shaft Washer (A)
BNT0807	Drive Shaft Bearing	BNT1464	Clutch Pawl	BNT1669	Worm Shaft
BNT0808	Friction Washer (B)	BNT1465	Clutch Pawl Spring	BNT1670	Worm Bushing
BNT0809	Key Washer	BNT1467	Level Wind Guard	BNT1671	Worm Shaft Washer (B)
BNT0810	Drag Washer	BNT1468	Level Wind Protector	BNT1672	"E" Lock
BNT0817	Multi-Purpose Screw	BNT1469	Line Guide	BNT1673	Handle Nut Plate
BNT0819	Drive Shaft Bushing	BNT1471	Drive Shaft Cover	BNT1708	Handle Assembly
BNT0820	Pinion Gear	BNT1472	Anti-Reverse Pawl	BNT1709	Right Side Plate
BNT0830	Space (optional)	BNT1473	Multi-Purpose Screw	BNT1710	Thumb Rest
BNT0835	Spool Shaft Bushing (B)	BNT1474	One-Piece Frame	BNT1711	Left Side Plate