



CURADO CU-200 94

CU200B

| PART # | DESCRIPTION | PART # | DESCRIPTION | PART # | DESCRIPTION |
|---------|--------------------------|---------|---------------------------|---------|-------------------------|
| BNT0015 | Drag Spring Washer | BNT1325 | Drive Gear | BNT1492 | Idle Gear |
| BNT0031 | Drive Shaft Bearing | BNT1330 | Pinion Gear | BNT1493 | Drive Gear Washer |
| BNT0032 | Bearing Retainer | BNT1344 | "C" Lock | BNT1494 | Drive Shaft Washer (B) |
| BNT0042 | Line Guide Pawl | BNT1356 | Brake Case Retainer Screw | BNT1495 | Drive Shaft Washer (A) |
| BNT0194 | Ball Bearing | BNT1362 | Turnkey Pawl | BNT1496 | Drive Shaft Cover |
| BNT0425 | Drive Shaft Lock | BNT1365 | Star Drag Nut | BNT1497 | Drive Shaft Cover Screw |
| BNT0664 | Spacer (B) | BNT1462 | Clutch Cam Retainer | BNT1498 | Worm Shaft Assembly |
| BNT0817 | Multi Purpose Screw | BNT1463 | Clutch Cam | BNT1499 | Clutch Plate Screw |
| BNT0830 | Spacer (optional) | BNT1465 | Clutch Pawl Spring | BNT1500 | Clutch Plate |
| BNT0987 | Multi Purpose Screw | BNT1467 | Level Wind Guard | BNT1501 | Yoke |
| BNT1092 | Pawl Cap | BNT1469 | Line Guide | BNT1502 | Spacer (optional) |
| BNT1106 | Star Drag Spring | BNT1475 | Quick-Fire II Clutch Bar | BNT1503 | Clutch Pawl |
| BNT1133 | Yoke/Turnkey Pawl Spring | BNT1485 | Handle Assembly | BNT1504 | Thumb Rest |
| BNT1206 | Roller Clutch Inner Tube | BNT1486 | Star Drag | BNT1505 | One-Piece Frame |
| BNT1207 | Roller Clutch Bearing | BNT1487 | Cast Control Cap Assembly | BNT1506 | Line Guard |
| BNT1211 | Key Washer | BNT1488 | Right Side Plate | BNT1507 | Spool Assembly |
| BNT1212 | Drag Washer (C) | BNT1489 | Side Plate Screws | BNT1508 | Brake Case |
| BNT1214 | Drag Washer (A) | BNT1490 | Anti-Reverse Ratchet | BNT1509 | Left Side Plate |
| BNT1289 | Star Drag Spacer | BNT1491 | Drive Shaft | BNT1510 | Turnkey Dial |
| BNT1317 | Brake Collar (red) | | | | |