



TO ORDER: USE BNT PREFIX  
WITH PART NUMBER

**PARTS LIST**

BNT #	DESCRIPTION	BNT #	DESCRIPTION	BNT #	DESCRIPTION
0015	Drag Spring Washer	0880	Spool Shaft Bushing (B)	1136	Clutch Cam
0016	Friction Washer (C)	1010	Spool Tension Spring	1137	Clutch Pawl
0042	Line Guide Pawl	1092	Pawl Cap	1138	Clutch Pawl Spring
0133	Worm Shaft Retainer	1103	Friction Washer (A)	1139	Joint Plate
0291	Right Side Plate Screw	1104	Click Gear	1140	Clutch Plate
0425	Drive Shaft Lock	1106	Star Drag Spring	1141	Retractor Spring
0489	Key Washer (A)	1107	Star Drag Nut	1143	Thumb Rest Support
0490	Drag Washer (B)	1108	Bearing Holder	1146	Spool Assembly
0586	Bolt Retainer	1112	Spool Shaft Bushing (A)	1147	Dial Case
0589	Flipping Lever Screw	1116	Cam Spring	1148	Magnetic Control Dial
0590	Lock Washer	1117	Flipping Cam	1160	Handle Nut Cover
0609	Clutch Plate Retainer Screw	1119	Drag Washer (A)	1161	Twin Power Handle Assembly
0612	Anti-Reverse Pawl Pin (A)	1120	Anti-Reverse Ratchet	1162	Star Drag
0661	Magnet Retainer Spring	1121	Anti-Reverse Pawl Spring (B)	1163	Side Plate Bolt (A)
0664	Spacer (B)	1122	Anti-Reverse Pawl Spring (A)	1164	Side Plate Bolt (B)
0766	Dial Friction Washer	1123	Idle Gear	1165	Cast Control Cap
0780	Magnet Retainer Lock	1124	Drive Shaft	1166	Flipping Lever
0795	Handle Nut Cover Screw	1125	Drive Shaft Retainer	1167	Right Side Plate
0797	Handle Nut	1126	Worm Shaft	1168	Drive Gear
0802	Spool Tension Spacer (B)	1127	Worm Bearing	1169	Pinion Gear
0803	Spool Tension Spacer (A)	1128	Anti-Reverse Pawl Pin (B)	1170	Thumb Rest
0807	Drive Shaft Bearing	1129	Anti-Reverse Pawl	1171	One-Piece Frame
0808	Friction Washer (B)	1130	Line Guide	1172	Quick-Fire II Clutch Bar
0816	Drive Shaft Washer	1131	Stabilizer Bar	1173	Left Side Plate
0817	Multi Purpose Screw	1133	Yoke Spring	1179	Handle Assembly (spare)
0819	Drive Shaft Bushing	1134	Yoke	1201	Retractor Spring Collar
0830	Spacer (optional)	1135	Yoke Spacer	1202	Magnet Retainer
0834	Level Wind Guard				