


# SHIMANO

CURADO S A-RB

CU-70XG

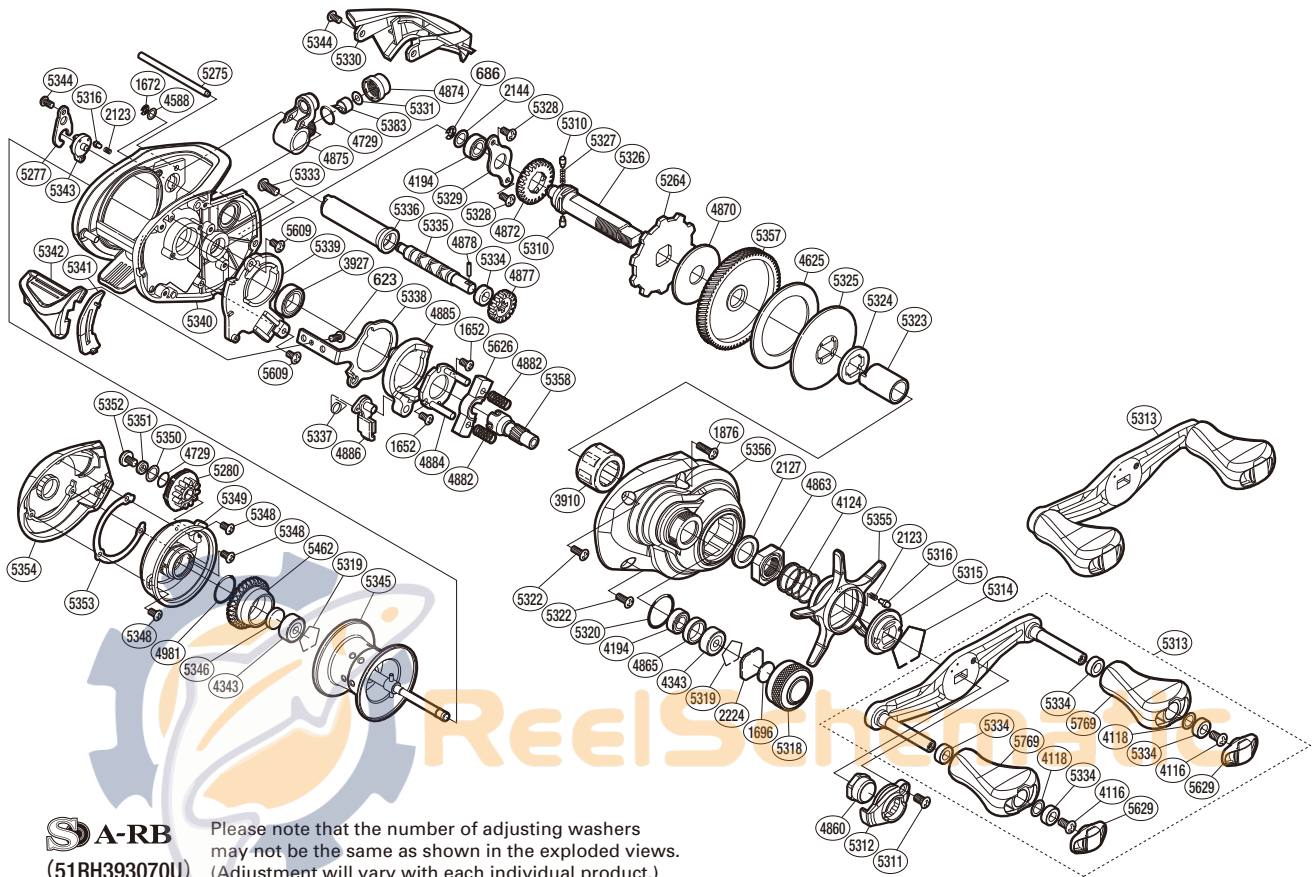

**S A-RB**  
(51RH393070U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0623	Screw	BNT4885	Clutch Cam	BNT5337	Clutch Pawl Spring
BNT0686	E Lock	BNT4886	Clutch Pawl	BNT5338	Clutch Plate
BNT1652	Screw	BNT4981	O Ring	BNT5339	Clutch Guard
BNT1672	E Lock	BNT5264	Anti-Reverse Ratchet	BNT5340	Frame
BNT1696	Cast Control Spacer	BNT5275	Stabilizer Bar	BNT5341	Clutch Bar Guide
BNT1876	Screw	BNT5277	Cam Lever Retainer	BNT5342	Clutch Bar
BNT2123	Click Spring	BNT5280	Brake Dial	BNT5343	Side Plate Cam Lever
BNT2127	Star Drag Spacer	BNT5310	Idle Gear Pin	BNT5344	Screw
BNT2144	Washer	BNT5311	Screw	BNT5345	Spool Assembly
BNT2224	Spool Tension Spacer	BNT5312	Handle Nut Plate	BNT5346	Spacer B
BNT3910	Roller Clutch Bearing	BNT5313	Handle Assembly	BNT5348	Screw
BNT3927	Ball Bearing	BNT5314	Click Plate Retainer	BNT5349	Brake Case
BNT4116	Screw	BNT5315	Star Drag Click Plate	BNT5350	Washer
BNT4118	Washer	BNT5316	Click Pin	BNT5351	Br Dial Spacer
BNT4124	Star Drag Spring	BNT5318	Cast Control Cap	BNT5352	Screw
BNT4194	Ball Bearing	BNT5319	Bearing Retainer	BNT5353	Washer
BNT4343	Ball Bearing	BNT5320	O Ring	BNT5354	Left Side Plate
BNT4588	Washer	BNT5322	Screw	BNT5355	Star Drag
BNT4625	Drag Washer	BNT5323	Roller Clutch Inner Tube	BNT5356	Right Side Plate
BNT4729	O Ring	BNT5324	Key Washer Spacer	BNT5357	Drive Gear
BNT4860	Handle Nut	BNT5325	Key Washer	BNT5358	Pinion Gear
BNT4863	Star Drag Nut	BNT5326	Drive Shaft	BNT5383	Line Guide Pawl
BNT4865	Bearing Spacer	BNT5327	Idle Gear Spring	BNT5462	Brake Ring Gear
BNT4870	Drag Washer	BNT5328	Screw	BNT5609	Screw
BNT4872	Idle Gear	BNT5329	Drive Shaft Retainer	BNT5626	Yoke
BNT4874	Pawl Cap	BNT5330	Level Wind Protector	BNT5629	Handle Knob Seal
BNT4875	Line Guide	BNT5331	Spacer	BNT5769	Handle Knob Assembly
BNT4877	Idle Gear	BNT5333	Screw		
BNT4878	Worm Shaft Pin	BNT5334	Bushing		
BNT4882	Yoke Spring	BNT5335	Worm Shaft		
BNT4884	Clutch Cam Retainer	BNT5336	Level Wind Guard	BNT4692	B-100 Oil (Accessory)