


# SHIMANO

## CURADO MGL

## CUMGL150XG

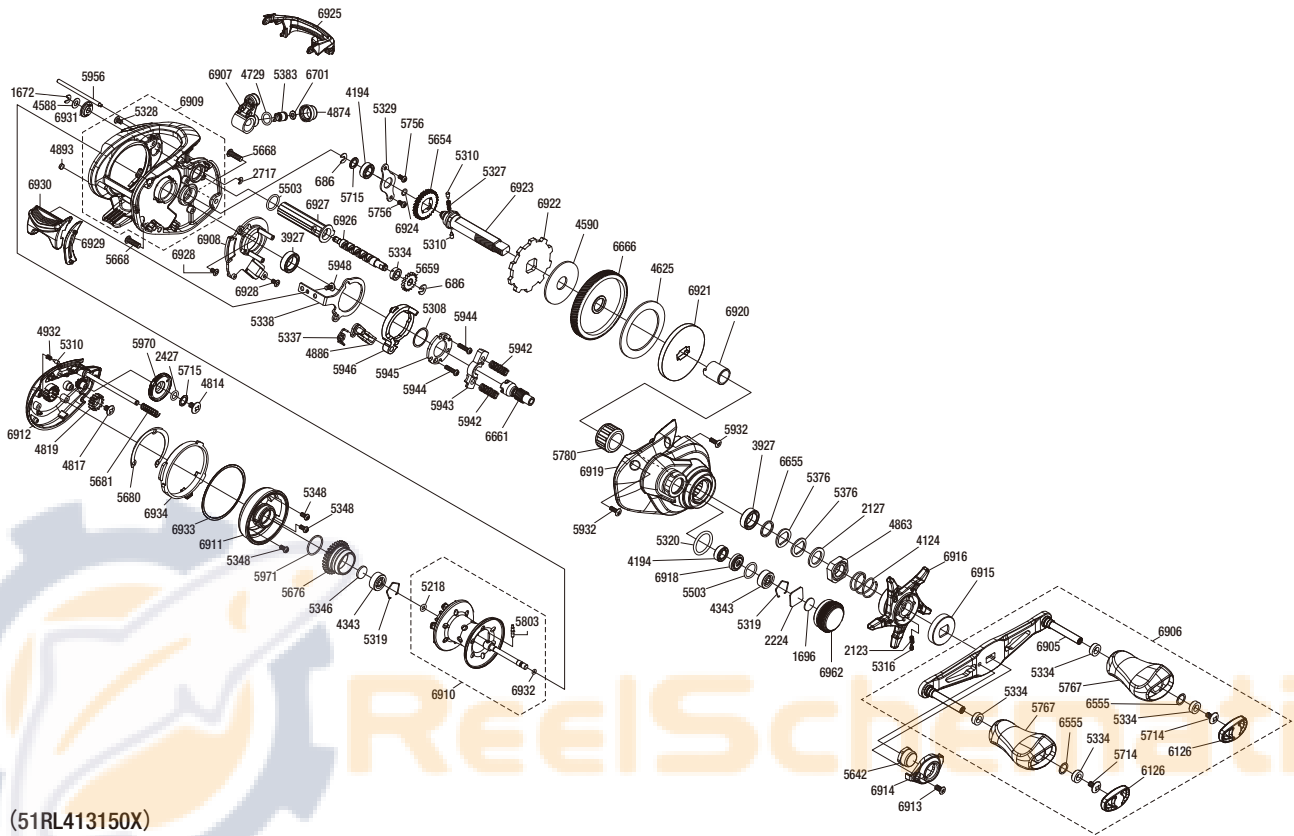

(51RL413150X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.  
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0686	E Lock	BNT5337	Clutch Pawl Spring	BNT6666	Drive Gear
BNT1672	E Lock	BNT5338	Clutch Plate	BNT6701	Washer
BNT1696	Cast Control Spacer (B)	BNT5346	Bearing Spacer	BNT6905	Handle Shank Assembly
BNT2123	Click Spring	BNT5348	Screw	BNT6906	Handle Assembly
BNT2127	Star Drag Spacer	BNT5376	Washer	BNT6907	Line Guide Assembly
BNT2224	Cast Control Spacer (A)	BNT5383	Line Guide Pawl	BNT6908	Clutch Guard Assembly
BNT2427	O Ring	BNT5503	O Ring	BNT6909	Frame Assembly
BNT2717	E Lock	BNT5642	Handle Nut	BNT6910	Spool Assembly
BNT3927	Ball Bearing	BNT5654	Idle Gear A	BNT6911	Brake Case
BNT4124	Star Drag Spring	BNT5659	Idle Gear C	BNT6912	Left Side Plate Assembly
BNT4194	Ball Bearing	BNT5668	Screw	BNT6913	Screw
BNT4343	Ball Bearing	BNT5676	Brake Ring Gear	BNT6914	Handle Nut Plate
BNT4588	Washer	BNT5680	Washer	BNT6915	Star Drag Click Plate
BNT4590	Drag Washer A	BNT5681	Spring	BNT6916	Star Drag
BNT4625	Drag Washer C	BNT5714	Screw	BNT6918	Bearing Spacer
BNT4729	O Ring	BNT5715	Washer	BNT6919	Right Side Plate
BNT4814	Screw	BNT5756	Screw	BNT6920	Roller Clutch Inner Tube
BNT4817	Screw	BNT5767	Handle Knob	BNT6921	Key Washer
BNT4819	Idle Gear	BNT5780	Roller Clutch Bearing	BNT6922	Anti-Reverse Ratchet
BNT4863	Star Drag Nut	BNT5803	Spool Clutch Pin	BNT6923	Drive Shaft
BNT4874	Pawl Cap	BNT5932	Screw	BNT6924	O Ring
BNT4886	Clutch Pawl Assembly	BNT5942	Yoke Spring	BNT6925	Level Wind Protector
BNT4893	Washer	BNT5943	Yoke	BNT6926	Worm Shaft
BNT4932	Click Spring	BNT5944	Screw	BNT6927	Level Wind Guard
BNT5218	O Ring	BNT5945	Clutch Cam Retainer	BNT6928	Screw
BNT5308	Washer	BNT5946	Clutch Cam	BNT6929	Clutch Bar Guide (B)
BNT5310	Idle Gear Pin	BNT5948	Screw	BNT6930	Clutch Button
BNT5316	Click Pin	BNT5956	Stabilizer Bar	BNT6931	Level Wind Guard Bushing
BNT5319	Bearing Retainer	BNT5970	Brake Dial	BNT6932	O Ring
BNT5320	O Ring	BNT5971	O Ring	BNT6933	Washer
BNT5327	Idle Gear Spring	BNT6126	Handle Knob Seal	BNT6934	Left Side Plate Cam Lever
BNT5328	Screw	BNT6555	Washer	BNT6962	Cast Control Cap
BNT5329	Drive Shaft Retainer	BNT6655	Washer		
BNT5334	Bushing	BNT6661	Pinion Gear		