


# SHIMANO

## CURADO

CU-200E7

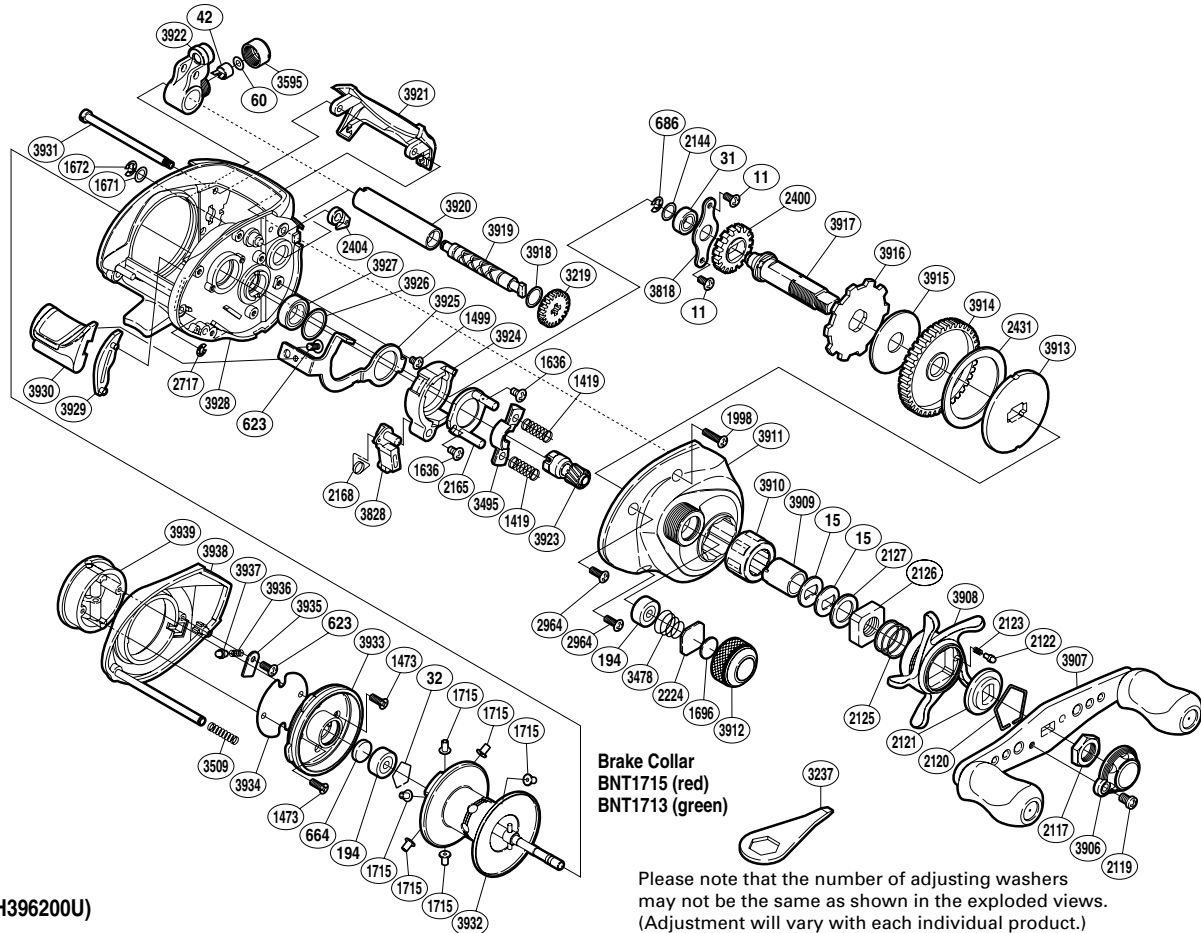

(1RH396200U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2127	Star Drag Spacer	BNT3916	Anti-Reverse Ratchet
BNT0015	Drag Spring Washer	BNT2144	Washer	BNT3917	Drive Shaft
BNT0031	Ball Bearing	BNT2165	Clutch Cam Retainer	BNT3918	Washer
BNT0032	Bearing Retainer	BNT2168	Clutch Pawl Spring	BNT3919	Worm Shaft
BNT0042	Line Guide Pawl	BNT2224	Spool Tension Spacer	BNT3920	Level Wind Guard
BNT0060	Spacer	BNT2400	Idle Gear	BNT3921	Level Wind Protector
BNT0194	Ball Bearing	BNT2404	Anti-Reverse Pawl	BNT3922	Line Guide
BNT0623	Screw	BNT2431	Drag Washer	BNT3923	Pinion Gear
BNT0664	Spacer B	BNT2717	E Lock	BNT3924	Clutch Cam
BNT0686	E Lock	BNT2964	Screw	BNT3925	Clutch Plate
BNT1419	Yoke Spring	BNT3219	Idle Gear C	BNT3926	Washer
BNT1473	Screw	BNT3478	Spool Tension Spring	BNT3927	Ball Bearing
BNT1499	Screw	BNT3495	Yoke	BNT3928	One-Piece Frame
BNT1636	Screw	BNT3509	Side Plate Spring	BNT3929	Clutch Bar Guide
BNT1671	Washer	BNT3595	Pawl Cap	BNT3930	Quick-Fire II Clutch Bar
BNT1672	E Lock	BNT3818	Drive Shaft Retainer	BNT3931	Level Wind Guide
BNT1696	Cast Control Spacer	BNT3828	Clutch Pawl	BNT3932	Spool Assembly
BNT1715	Brake Collar (red)	BNT3906	Handle Retainer	BNT3933	Brake Case
BNT1998	Screw	BNT3907	Handle Assembly	BNT3934	Brake Case Spacer
BNT2117	Handle Nut	BNT3908	Star Drag	BNT3935	Brake Spring Retainer
BNT2119	Screw	BNT3909	Roller Clutch Inner Tube	BNT3936	Click Spring
BNT2120	Click Plate Retainer	BNT3910	Roller Clutch Bearing	BNT3937	Click Pin
BNT2121	Star Drag Click	BNT3911	Right Side Plate	BNT3938	Left Side Plate
BNT2122	Click Pin	BNT3912	Cast Control Cap	BNT3939	Turnkey Dial
BNT2123	Click Spring	BNT3913	Key Washer		
BNT2125	Star Drag Spring	BNT3914	Drive Gear	BNT1713	Brake Collar (green) (accessory)
BNT2126	Star Drag Nut	BNT3915	Drag Washer	BNT3237	Wrench (accessory)

(200513)