


# SHIMANO

## CURADO

## S A-RB

## CU-300E

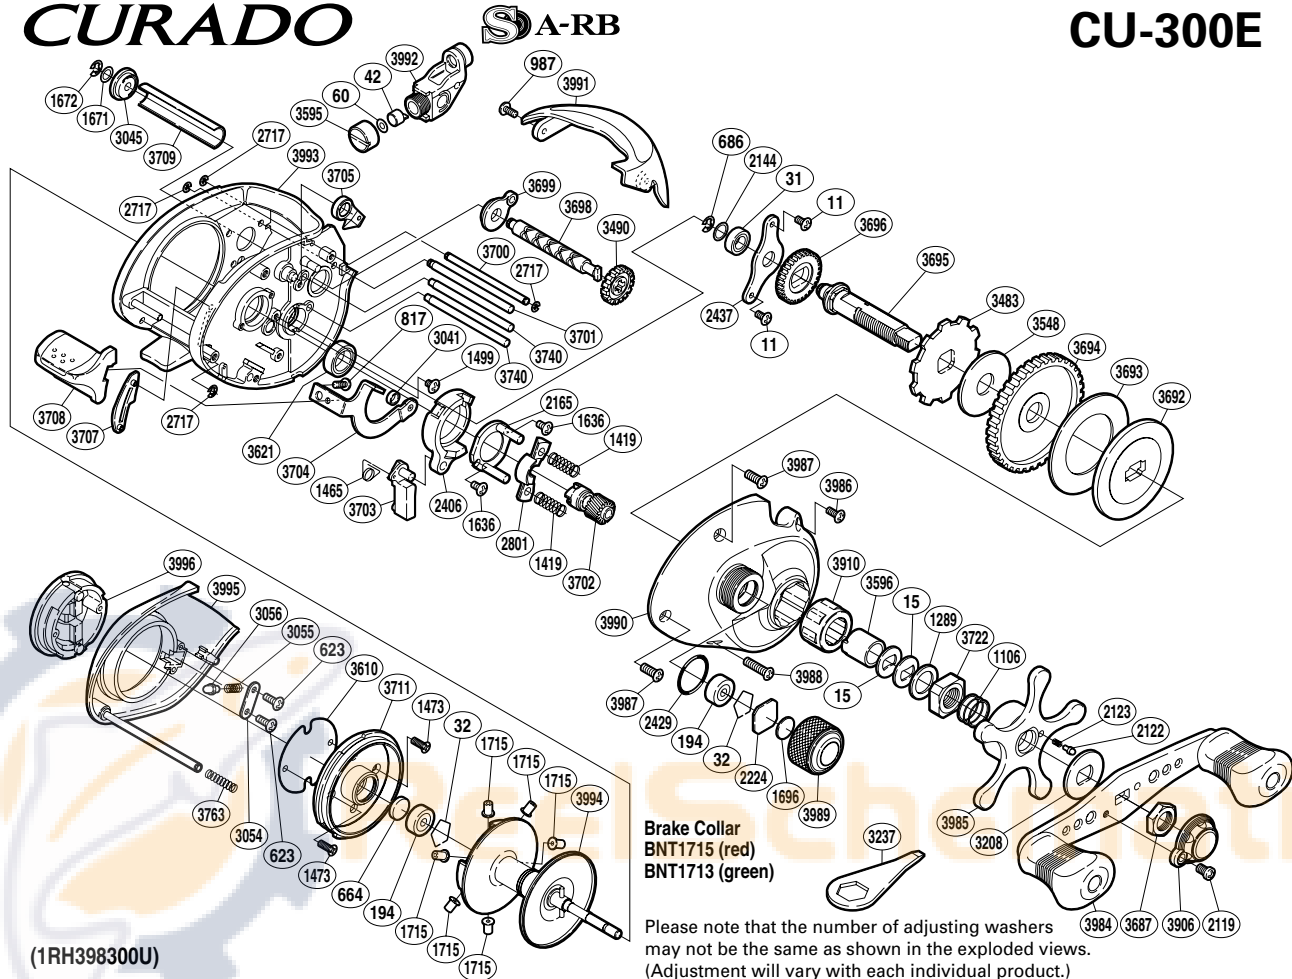

(1RH398300U)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2406	Clutch Cam	BNT3703	Clutch Pawl
BNT0015	Drag Spring Washer	BNT2429	O Ring	BNT3704	Clutch Plate
BNT0031	Ball Bearing	BNT2437	Drive Shaft Retainer	BNT3705	Anti-Reverse Pawl
BNT0032	Bearing Retainer	BNT2717	E Lock	BNT3707	Clutch Bar Guide B
BNT0042	Line Guide Pawl	BNT2801	Yoke	BNT3708	Quick-Fire II Clutch Bar
BNT0060	Spacer	BNT3041	Clutch Plate Shaft Support	BNT3709	Level Wind Guard
BNT0194	Ball Bearing	BNT3045	Worm Bushing B	BNT3711	Brake Case
BNT0623	Screw	BNT3054	Click Pin Retainer	BNT3722	Star Drag Nut
BNT0664	Spacer B	BNT3055	Click Spring	BNT3740	Stabilizer Bar
BNT0686	E Lock	BNT3056	Click Pin	BNT3763	Side Plate Spring
BNT0817	Screw	BNT3208	Star Drag Click Plate	BNT3906	Handle Retainer
BNT0987	Screw	BNT3483	Anti-Reverse Ratchet	BNT3910	Roller Clutch Bearing
BNT1106	Star Drag Spring	BNT3490	Idle Gear	BNT3984	Handle Assembly
BNT1289	Star Drag Spacer	BNT3548	Drag Washer	BNT3985	Star Drag
BNT1419	Yoke Spring	BNT3595	Pawl Cap	BNT3986	Screw
BNT1465	Clutch Pawl Spring	BNT3596	Roller Clutch Inner Tube	BNT3987	Screw
BNT1473	Screw	BNT3610	Brake Case Spacer	BNT3988	Screw
BNT1499	Screw	BNT3621	Ball Bearing	BNT3989	Cast Control Cap
BNT1636	Screw	BNT3687	Handle Nut	BNT3990	Right Side Plate
BNT1671	Washer	BNT3692	Key Washer	BNT3991	Thumb Rest
BNT1672	E Lock	BNT3693	Drag Washer	BNT3992	Line Guide
BNT1696	Cast Control Spacer	BNT3694	Drive Gear	BNT3993	One-Piece Frame
BNT1715	Brake Collar (red)	BNT3695	Drive Shaft	BNT3994	Spool Assembly
BNT2119	Screw	BNT3696	Idle Gear	BNT3995	Left Side Plate
BNT2122	Click Pin	BNT3698	Worm Shaft	BNT3996	Turnkey Dial
BNT2123	Click Spring	BNT3699	Worm Bushing A		
BNT2144	Washer	BNT3700	Line Guard		
BNT2165	Clutch Cam Retainer	BNT3701	Level Wind Guide	BNT1713	Brake Collar (green) (accessory)
BNT2224	Spool Tension Spacer	BNT3702	Pinion Gear	BNT3237	Wrench (accessory)

(200701)