


# SHIMANO

CURADO S A-RB

CU-71HG

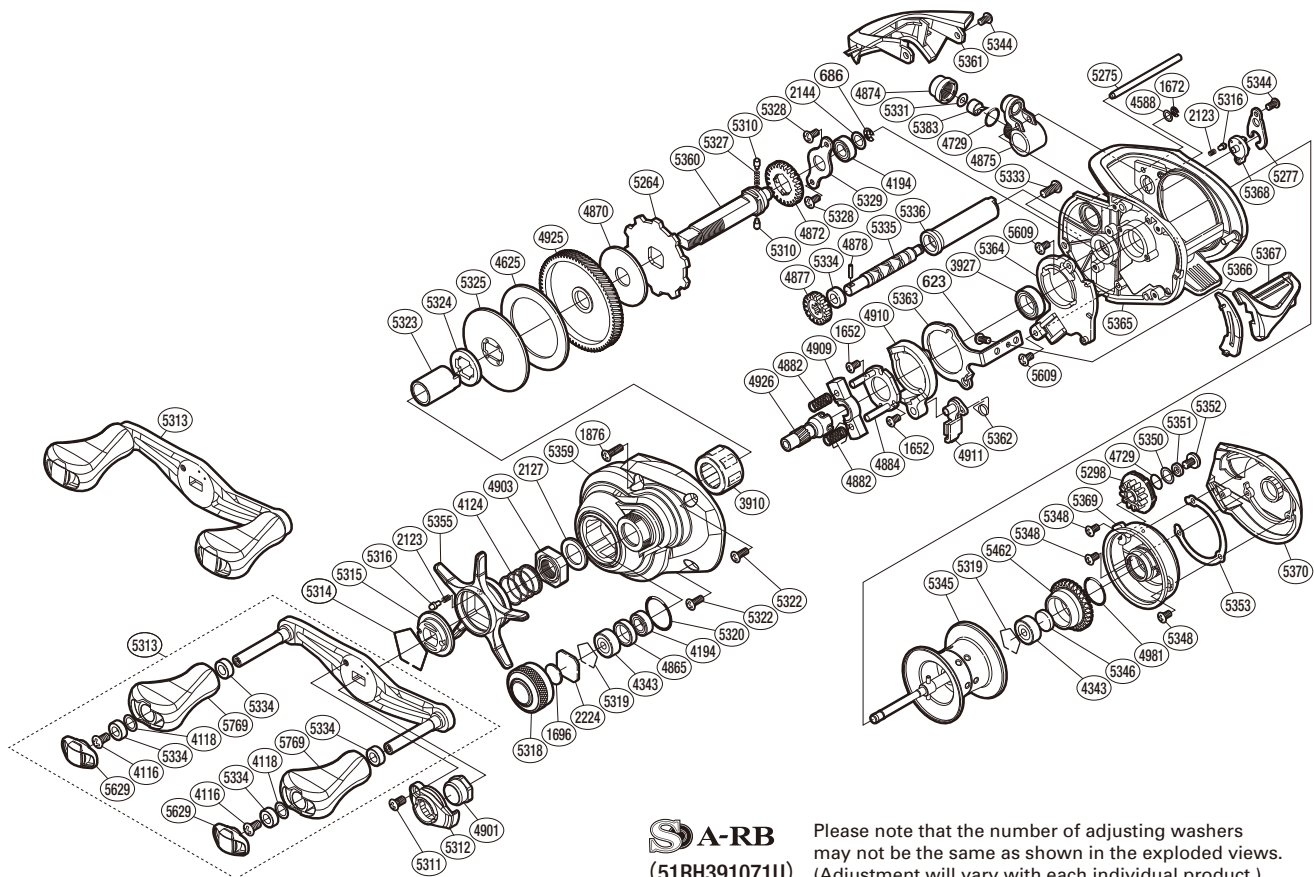

**S A-RB**  
(51RH391071U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0623	Screw	BNT4909	Yoke	BNT5336	Level Wind Guard
BNT0686	E Lock	BNT4910	Clutch Cam	BNT5344	Screw
BNT1652	Screw	BNT4911	Clutch Pawl	BNT5345	Spool Assembly
BNT1672	E Lock	BNT4925	Drive Gear	BNT5346	Spacer B
BNT1696	Cast Control Spacer	BNT4926	Pinion Gear	BNT5348	Screw
BNT1876	Screw	BNT4981	O Ring	BNT5350	Washer
BNT2123	Click Spring	BNT5264	Anti-Reverse Ratchet	BNT5351	Br Dial Spacer
BNT2127	Star Drag Spacer	BNT5275	Stabilizer Bar	BNT5352	Screw
BNT2144	Washer	BNT5277	Cam Lever Retainer	BNT5353	Washer
BNT2224	Spool Tension Spacer	BNT5298	Brake Dial	BNT5355	Star Drag
BNT3910	Roller Clutch Bearing	BNT5310	Idle Gear Pin	BNT5359	Left Side Plate
BNT3927	Ball Bearing	BNT5311	Screw	BNT5360	Drive Shaft
BNT4116	Screw	BNT5312	Handle Nut Plate	BNT5361	Level Wind Protector
BNT4118	Washer	BNT5313	Handle Assembly	BNT5362	Clutch Pawl Spring
BNT4124	Star Drag Spring	BNT5314	Click Plate Retainer	BNT5363	Clutch Plate
BNT4194	Ball Bearing	BNT5315	Star Drag Click Plate	BNT5364	Clutch Guard
BNT4343	Ball Bearing	BNT5316	Click Pin	BNT5365	Frame
BNT4588	Washer	BNT5318	Cast Control Cap	BNT5366	Clutch Bar Guide
BNT4625	Drag Washer	BNT5319	Bearing Retainer	BNT5367	Clutch Bar
BNT4729	O Ring	BNT5320	O Ring	BNT5368	B Side Plate Cam Lever
BNT4865	Bearing Spacer	BNT5322	Screw	BNT5369	Brake Case
BNT4870	Drag Washer	BNT5323	Roller Clutch Inner Tube	BNT5370	Right Side Plate
BNT4872	Idle Gear	BNT5324	Key Washer Spacer	BNT5383	Line Guide Pawl
BNT4874	Pawl Cap	BNT5325	Key Washer	BNT5462	Brake Ring Gear
BNT4875	Line Guide	BNT5327	Idle Gear Spring	BNT5609	Screw
BNT4877	Idle Gear	BNT5328	Screw	BNT5629	Handle Knob Seal
BNT4878	Worm Shaft Pin	BNT5329	Drive Shaft Retainer	BNT5769	Handle Knob Assembly
BNT4882	Yoke Spring	BNT5331	Spacer		
BNT4884	Clutch Cam Retainer	BNT5333	Screw		
BNT4901	Handle Nut	BNT5334	Bushing		
BNT4903	Star Drag Nut	BNT5335	Worm Shaft	BNT4692	B-100 Oil (accessory)