


# SHIMANO

## CURADO MGL

## CUMGL150HG

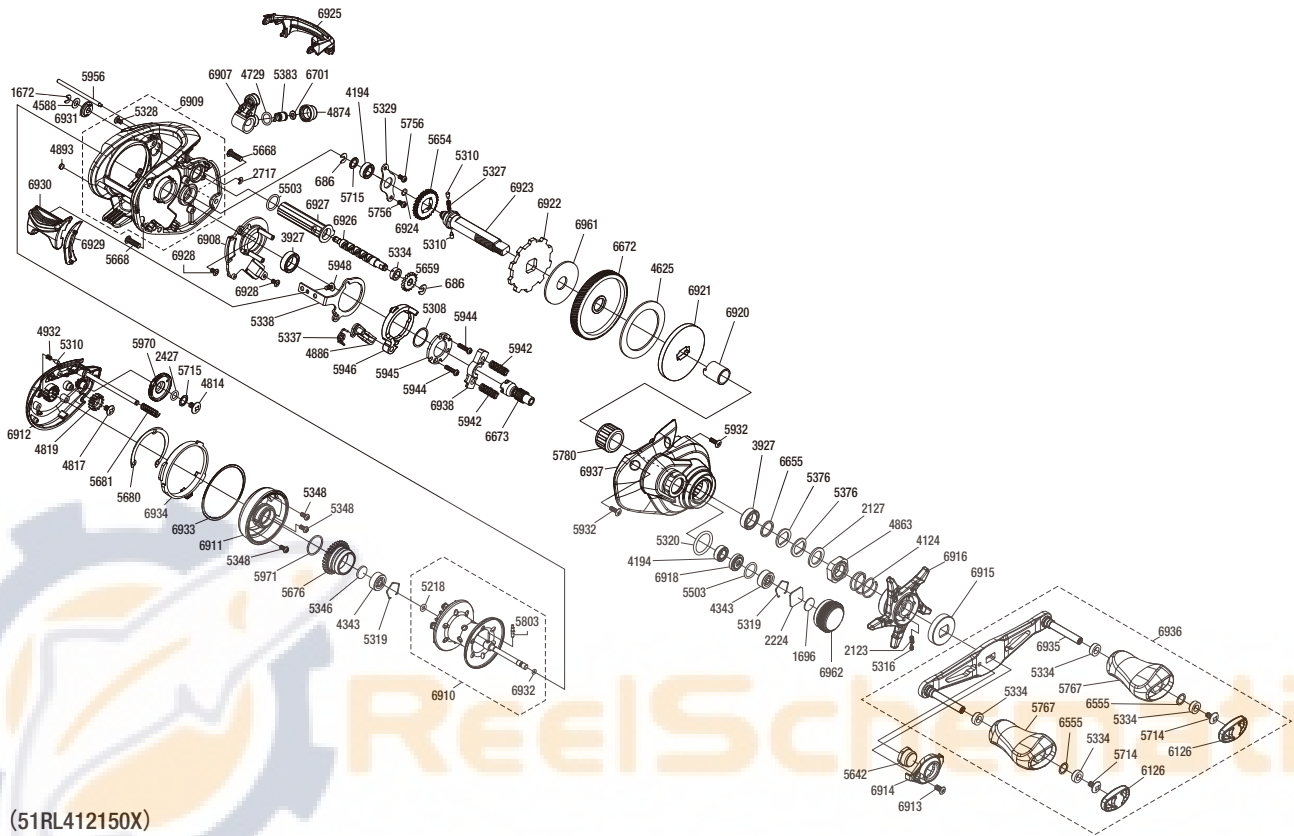

(51RL412150X)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0686	E Lock	BNT5338	Clutch Plate	BNT6907	Line Guide Assembly
BNT1672	E Lock	BNT5346	Bearing Spacer	BNT6908	Clutch Guard Assembly
BNT1696	Cast Control Spacer (B)	BNT5348	Screw	BNT6909	Frame Assembly
BNT2123	Click Spring	BNT5376	Washer	BNT6910	Spool Assembly
BNT2127	Star Drag Spacer	BNT5383	Line Guide Pawl	BNT6911	Brake Case
BNT2224	Cast Control Spacer (A)	BNT5503	O Ring	BNT6912	Left Side Plate Assembly
BNT2427	O Ring	BNT5642	Handle Nut	BNT6913	Screw
BNT2717	E Lock	BNT5654	Idle Gear A	BNT6914	Handle Nut Plate
BNT3927	Ball Bearing	BNT5659	Idle Gear C	BNT6915	Star Drag Click Plate
BNT4124	Star Drag Spring	BNT5668	Screw	BNT6916	Star Drag
BNT4194	Ball Bearing	BNT5676	Brake Ring Gear	BNT6918	Bearing Spacer
BNT4343	Ball Bearing	BNT5680	Washer	BNT6920	Roller Clutch Inner Tube
BNT4588	Washer	BNT5681	Spring	BNT6921	Key Washer
BNT4625	Drag Washer C	BNT5714	Screw	BNT6922	Anti-Reverse Ratchet
BNT4729	O Ring	BNT5715	Washer	BNT6923	Drive Shaft
BNT4814	Screw	BNT5756	Screw	BNT6924	O Ring
BNT4817	Screw	BNT5767	Handle Knob	BNT6925	Level Wind Protector
BNT4819	Idle Gear	BNT5780	Roller Clutch Bearing	BNT6926	Worm Shaft
BNT4863	Star Drag Nut	BNT5803	Spool Clutch Pin	BNT6927	Level Wind Guard
BNT4874	Pawl Cap	BNT5932	Screw	BNT6928	Screw
BNT4886	Clutch Pawl Assembly	BNT5942	Yoke Spring	BNT6929	Clutch Bar Guide (B)
BNT4893	Washer	BNT5944	Screw	BNT6930	Clutch Button
BNT4932	Click Spring	BNT5945	Clutch Cam Retainer	BNT6931	Level Wind Guard Bushing
BNT5218	O Ring	BNT5946	Clutch Cam	BNT6932	O Ring
BNT5308	Washer	BNT5948	Screw	BNT6933	Washer
BNT5310	Idle Gear Pin	BNT5956	Stabilizer Bar	BNT6934	Left Side Plate Cam Lever
BNT5316	Click Pin	BNT5970	Brake Dial	BNT6935	Handle Shank Assembly
BNT5319	Bearing Retainer	BNT5971	O Ring	BNT6936	Handle Assembly
BNT5320	O Ring	BNT6126	Handle Knob Seal	BNT6937	Right Side Plate
BNT5327	Idle Gear Spring	BNT6555	Washer	BNT6938	Yoke
BNT5328	Screw	BNT6655	Washer	BNT6961	Drag Washer B
BNT5329	Drive Shaft Retainer	BNT6672	Drive Gear	BNT6962	Cast Control Cap
BNT5334	Bushing	BNT6673	Pinion Gear		
BNT5337	Clutch Pawl Spring	BNT6701	Washer		