


SHIMANO®

DENDOMARU

DDM-4000HPGR

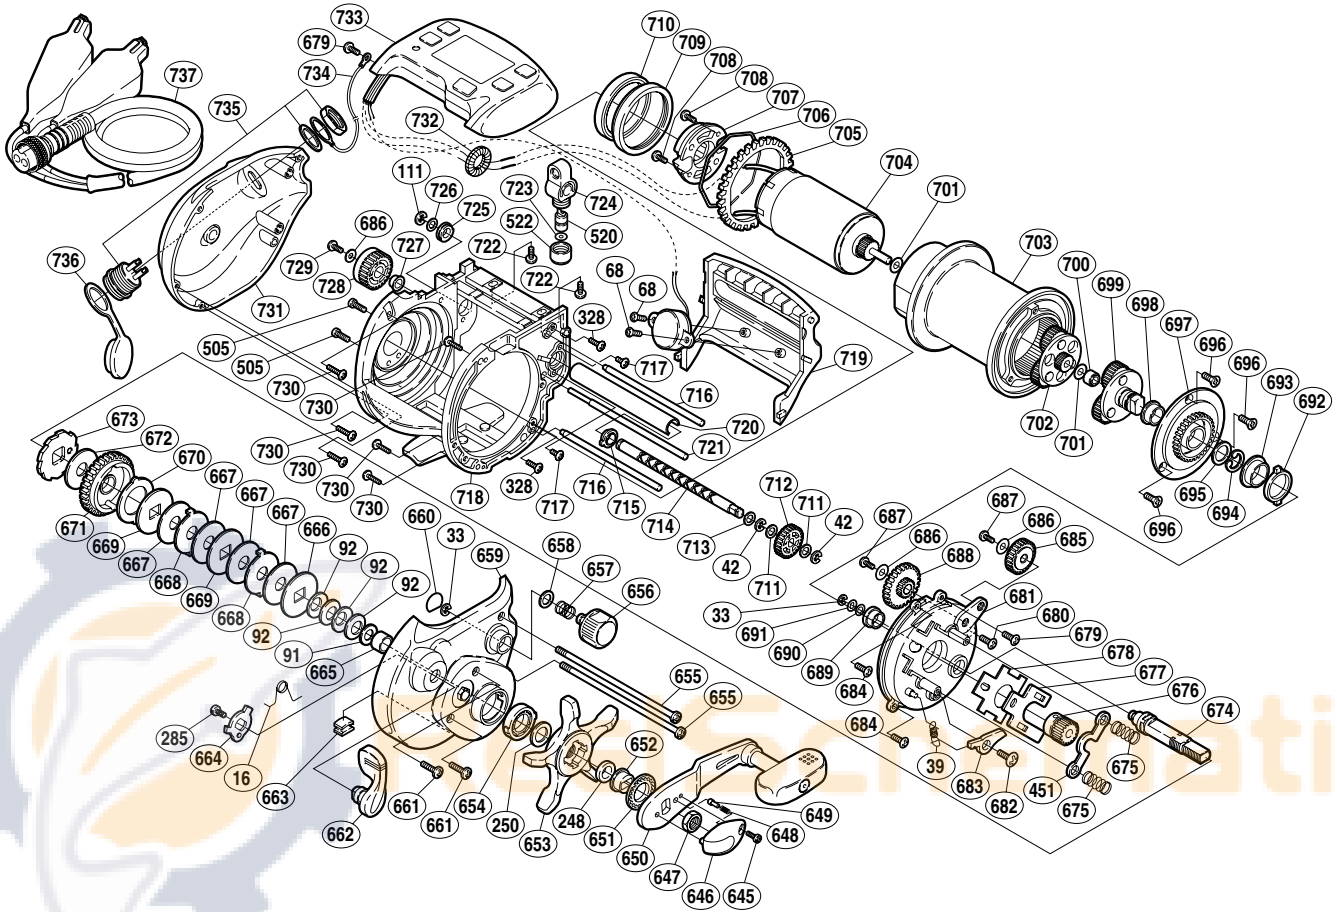

Part No.	Description	Part No.	Description	Part No.	Description
TGT0016	Clutch Spring	TGT0666	Key Washer	TGT0703	Spool
TGT0033	"E" Lock	TGT0667	Drag Washer (D)	TGT0704	Motor
TGT0039	Anti-Reverse Pawl Spring	TGT0668	Eared Washer (C)	TGT0705	Counter Gear (A)
TGT0042	"E" Lock	TGT0669	Eared Washer (E)	TGT0706	Gear Retainer
TGT0068	Buzzer Screw	TGT0670	Eared Washer (F)	TGT0707	Motor Holder
TGT0091	Bearing Thrust Washer	TGT0671	Drive Gear	TGT0708	Motor Screw
TGT0092	Drag Spring Washer (8H)	TGT0672	Drag Washer (B)	TGT0709	Bearing Rim
TGT0111	"E" Lock	TGT0673	Anti-Reverse Ratchet	TGT0710	Ball Bearing
TGT0248	Star Drag Spacer	TGT0674	Drive Shaft	TGT0711	Worm Shaft Washer (A)
TGT0250	Star Drag Washer	TGT0675	Yoke Spring	TGT0712	Worm Gear
TGT0285	Clutch Lever Screw	TGT0676	Pinion Gear	TGT0713	Worm Shaft Washer (B)
TGT0328	Stabilizer Bar Screw	TGT0677	Clutch Plate	TGT0714	Worm Shaft
TGT0451	Yoke	TGT0678	Clutch Plate Washer	TGT0715	Worm Bushing (A)
TGT0505	Motor Holder Screw	TGT0679	Counter Unit Screw (thin)	TGT0716	Stabilizer Bar (A)
TGT0520	Line Guide Pawl	TGT0680	Set Plate Screw (black)	TGT0717	Worm Bushing Screw
TGT0522	Pawl Cap	TGT0681	Set Plate	TGT0718	One-Piece Frame
TGT0645	Handle Nut Plate Screw	TGT0682	Anti-Reverse Pawl Screw	TGT0719	Level Wind Protector
TGT0646	Handle Nut Plate	TGT0683	Anti-Reverse Pawl	TGT0720	Level Wind Guard
TGT0647	Handle Nut	TGT0684	Set Plate Screw (NL)	TGT0721	Stabilizer Bar (B)
TGT0648	Click Spring	TGT0685	Worm Idle Gear (A)	TGT0722	Counter Unit Screw (thick)
TGT0649	Click Pin	TGT0686	Lock Washer	TGT0723	Spacer
TGT0650	Handle Assembly	TGT0687	Idle Gear Screw	TGT0724	Line Guide
TGT0651	Click Ring	TGT0688	Worm Idle Gear (B)	TGT0725	Worm Bushing (B)
TGT0652	Handle Washer	TGT0689	Drive Shaft Bushing	TGT0726	Worm Shaft Washer (B)-1
TGT0653	Star Drag	TGT0690	Drive Shaft Washer	TGT0727	Counter Gear Bushing
TGT0654	Drive Shaft Bushing (B)	TGT0691	Drive Shaft Washer (B)	TGT0728	Counter Gear (B)
TGT0655	Right Side Plate Screw (B)	TGT0692	Bushing (A)	TGT0729	Counter Gear (B) Screw
TGT0656	Cast Control Cap	TGT0693	Bushing (A) Sleeve	TGT0730	Side Plate Screw
TGT0657	Cast Control Spring	TGT0694	"C" Lock	TGT0731	Left Side Plate
TGT0658	Spring Washer	TGT0695	Plate Washer	TGT0732	Reactor
TGT0659	Right Side Plate	TGT0696	Plate Screw	TGT0733	Counter Unit
TGT0660	Spacer	TGT0697	Spool Plate (right)	TGT0734	Earth Line
TGT0661	Right Side Plate Screw (A)	TGT0698	Plate Bushing (large)	TGT0735	Socket Set
TGT0662	Clutch Lever	TGT0699	Reduction Gear Plate (B)	TGT0736	Socket Cap
TGT0663	Line Clip	TGT0700	Plate Bushing (small)		
TGT0664	Clutch Cam	TGT0701	Adjusting Washer (A)		
TGT0665	Drive Shaft Sleeve	TGT0702	Reduction Gear Plate (A)	TGT0737	Cable