


Exploded View

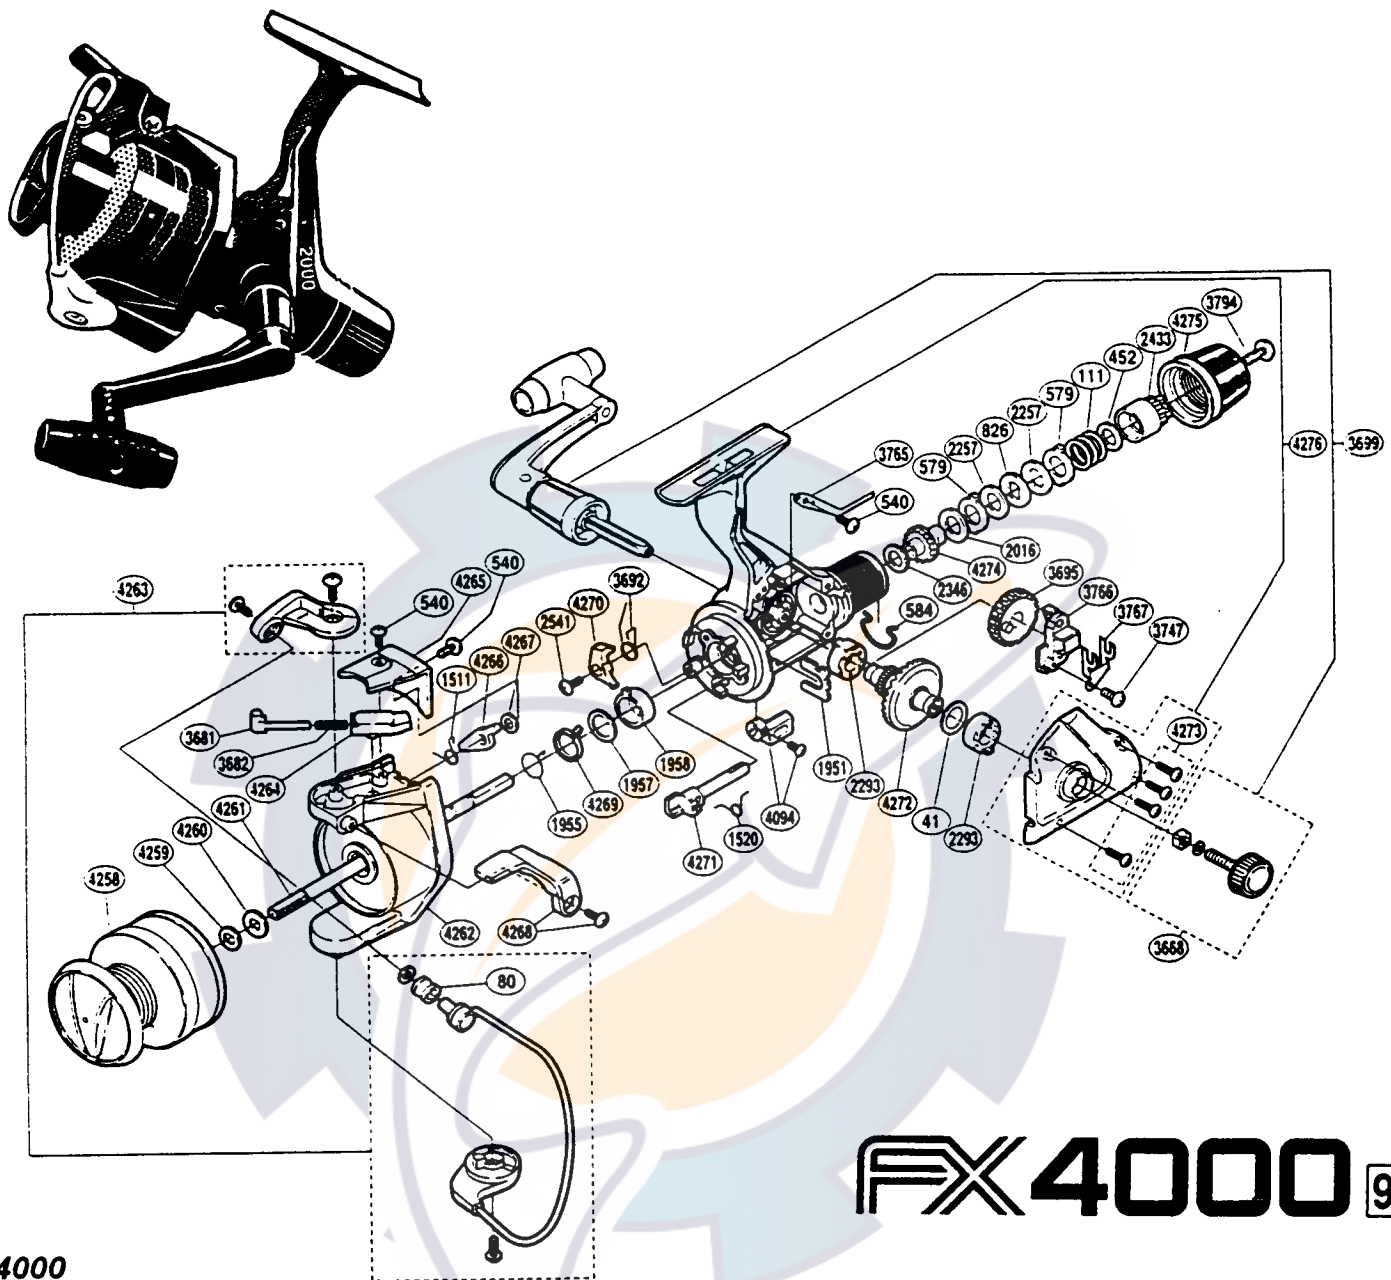

FX4000 95

FX4000

Part #	Description	Part #	Description	Part #	Description
RD 0041	Drive Gear Washer	RD 2346	Drag Washer "C" (cloth)	RD 4260	Spool Support
RD 0080	Line Roller	RD 2433	Pressure Screw	RD 4261	Main Shaft
RD 0111	Drag Coil Spring	RD 2541	Anti-Reverse Pawl Screw	RD 4262	Rotor Assembly
RD 0452	Drag Spring Washer	RD 3668	Handle Screw Cap Assembly	RD 4263	Bail Assembly
RD 0540	Multi Purpose Screw	RD 3681	Bail Spring Guide (A)	RD 4264	Bail Spring Guide (B)
RD 0579	Eared Washer "B"	RD 3682	Bail Spring	RD 4265	Bail Spring Cover
RD 0584	Hold Click Spring	RD 3692	Anti-Reverse Pawl Spring	RD 4266	Bail Trip Lever
RD 0826	Key Washer "A"	RD 3695	Oscillating Gear	RD 4267	Bail Trip Lever Washer
RD 1511	Lever Spring	RD 3699	Handle Assembly	RD 4268	Quick Fire II Trigger Assembly
RD 1520	Anti-Reverse Cam Spring	RD 3747	Slider Retainer Screw	RD 4269	Anti-Reverse Lock Out
RD 1951	Rotor Lock	RD 3765	Drag Click	RD 4270	Anti-Reverse Pawl
RD 1955	Anti-Reverse Lock Out Spring	RD 3766	Oscillating Slider	RD 4271	Anti-Reverse Cam
RD 1957	Bushing Washer	RD 3767	Oscillating Slider Retainer	RD 4272	Drive Gear
RD 1958	Bushing	RD 3794	Drag Knob Screw	RD 4273	Side Cover Screws
RD 2016	Drag Washer "H" (cloth)	RD 4094	Anti-Reverse Lever Assembly	RD 4274	Drag Shaft
RD 2257	Drag Washer "H" (blue)	RD 4258	Spool Assembly	RD 4275	Drag Knob
RD 2293	Drive Gear Bushing	RD 4259	Spool Washer	RD 4276	Body Assembly