



**TO ORDER: USE BNT PREFIX
WITH PART NUMBER**

PARTS LIST

BNT # DESCRIPTION

0042	Line Guide Pawl
0133	Worm Shaft Retainer
0191	Side Plate Screw
0425	Clutchbutton Lock
0590	Lock Washer
0609	Drive Shaft Retainer Screw
0612	Anti-Reverse Pawl Pin
0613	Anti-Reverse Pawl
0645	Flipping Lever Screw
0661	Magnet Retainer Spring
0664	Spacer (B)
0766	Dial Friction Washer
0770	Handle Nut Plate Screw
0780	Magnet Retainer Lock
0796	Handle Nut Plate
0797	Handle Nut
0799	Friction Washer
0801	Cast Control Cap
0802	Spool Tension Spacer (B)
0803	Spool Tension Spacer (A)
0816	Drive Shaft Washer
0819	Drive Shaft Bushing
0823	Retractor Spring
0825	Yoke Plate Washer (A)
0830	Spacer (Optional)

BNT # DESCRIPTION

0834	Level Wind Guard
0838	Magnetic Control Dial
0853	Handle Assembly
0854	Flipping Lever
0859	Flipping Retractor Spring
0860	Yoke Plate Washer (B)
0880	Spool Shaft Bushing (C)
0906	Coned Disc Spring
0907	Key Washer (A)
0908	Drag Washer (D)
0909	Key Washer (C)
0911	Shift Cam
0919	Shift Spring
0920	Shift Spring Guide (B)
0925	Shift Arm
0927	Drive Gear Washer
0930	Shift Sleeve
0935	Drag Washer (A)
0936	Anti-Reverse Ratchet
0940	Drive Shaft Retainer
0942	Worm Bearing
0993	Yoke Spring
1008	Star Drag
1010	Spool Tension Spring
1011	Spool Shaft Bushing (A)

BNT # DESCRIPTION

1013	Cam Spring
1014	Flipping Cam
1015	Shift Spring Guide (A)
1016	Drag Shaft (B)
1017	Bearing Holder
1018	Drive Shaft Bearing (B)
1019	Drive Gear (L)
1020	Shift Clutch (L)
1021	Shift Clutch (H)
1022	Drive Gear (H)
1023	Drag Shaft (A)
1024	Drive Shaft Washer
1025	Drive Shaft
1029	Pinion Gear
1030	Yoke
1031	Joint Plate
1032	Clutch Button
1035	Dial Case
1039	Line Guide
1044	Left Side Plate Screw
1073	Idle Gear
1074	Worm Shaft
1075	Magnet Retainer
1092	Pawl Cap
1093	Spool