



**TO ORDER: USE BNT PREFIX
WITH PART NUMBER**

PARTS LIST

BNT #	DESCRIPTION
0015	Drag Spring Washer
0016	Friction Washer (C)
0042	Line Guide Pawl
0133	Worm Shaft Retainer
0184	Magnet Retainer Lock
0291	Side Plate Screw
0425	Clutchbutton Lock
0604	Yoke Spring
0612	Anti-Reverse Pawl Pin
0660	Spring Spacer
0661	Magnet Retainer Spring
0664	Spacer (B)
0706	Magnet Retainer
0766	Dial Friction Washer
0795	Handle Nut Plate Screw
0796	Handle Nut Plate
0799	Friction Washer
0801	Cast Control Cap
0802	Spool Tension Spacer (B)
0803	Spool Tension Spacer (A)

BNT #	DESCRIPTION
0804	Spool Tension Spring
0805	Spool Shaft Bushing (A)
0807	Drive Shaft Bearing
0808	Friction Washer (B)
0809	Key Washer (A)
0810	Drag Washer (A)
0812	Drag Washer (B)
0813	Key Washer (B)
0814	Anti-Reverse Ratchet
0816	Drive Shaft Washer
0817	Multi Purpose Screw
0818	Drive Shaft Retainer
0819	Drive Shaft Bushing
0821	Yoke
0822	Retractor Spring Pin
0824	Yoke Plate Washer (B)
0825	Yoke Plate Washer (A)
0828	Worm Bearing
0829	Anti-Reverse Pawl
0830	Spacer (Optional)

BNT #	DESCRIPTION
0832	Level Wind Protector
0834	Level Wind Guard
0835	Spool Shaft Bushing (B)
0837	Dial Case
0838	Magnetic Control Dial
0840	Left Side Plate Screw
0841	Handle Hut
0842	Star Drag
0844	Drive Gear
0845	Drive Shaft
0846	Pinion Gear
0847	Retractor Spring
0848	Clutch Button
0849	Worm Shaft
0851	Spool
0853	Handle Assembly
0877	Line Guide
0880	Spool Shaft Bushing (C)
1092	Pawl Cap

Prices and specifications subject to change without notice.