


**BA AERO  
ULS**

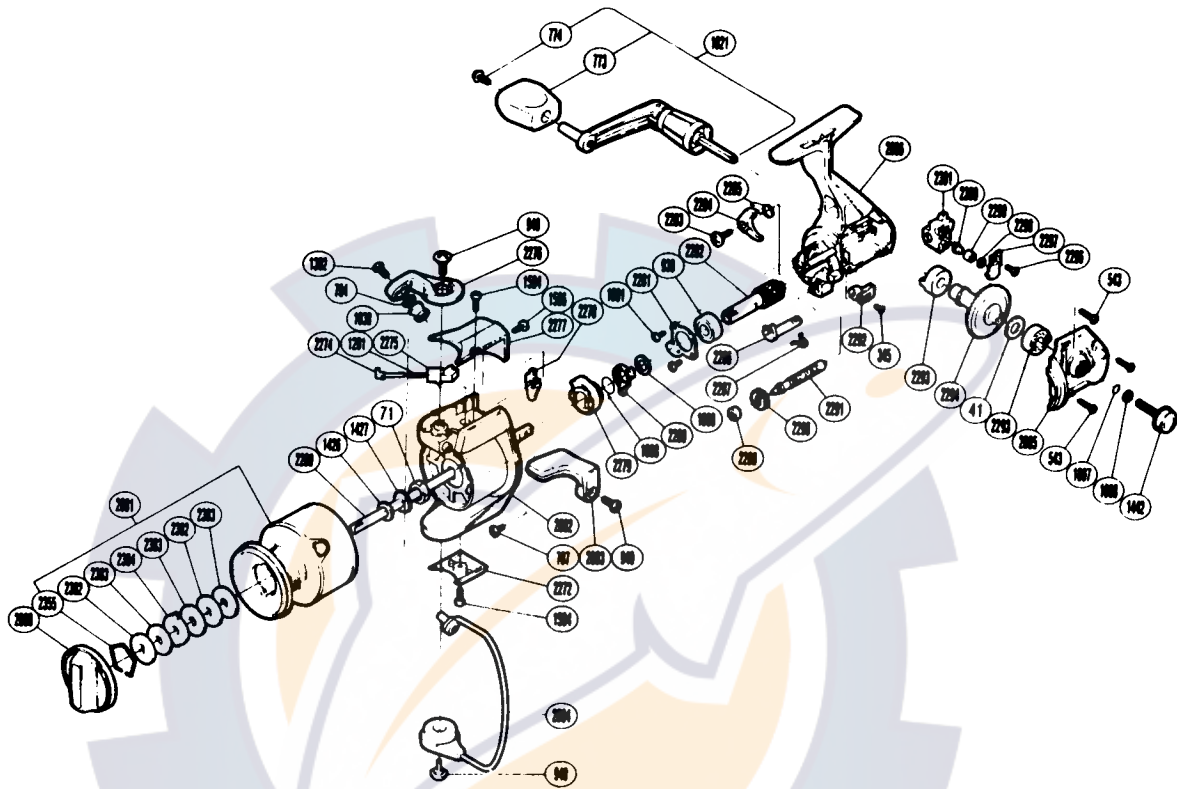

**TO ORDER: USE RD PREFIX  
WITH PART NUMBER**

**PARTS LIST**

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0041	Drive Gear Washer	1888	Anti-Reverse Lock Out Spring	2291	Worm Shaft
0071	Rotor Nut	1890	Bushing Washer	2292	Anti-Reverse Lever
0345	Anti-Reverse Lever Screw	1891	Multi Purpose Screw	2293	Drive Gear Bushing
0543	Side Cover Screw (B)	2269	Main Shaft	2294	Drive Gear
0773	Handle Knob	2272	Rotor Side Cover	2296	Slider Retainer Screw
0774	Handle Knob Screw	2274	Bail Spring Guide (A)	2297	Oscillating Pawl Cover
0784	Line Roller Washer	2275	Bail Spring Guide (B)	2298	Spacer
0787	Nut Lock Screw	2276	Bail Arm	2299	Oscillating Slider Bushing
0930	Ball Bearing	2277	Bail Spring Cover	2300	Oscillating Pawl
0940	Bail Trip Cam Screw	2278	Bail Trip Lever	2301	Oscillating Slider
0949	Trigger Screw	2279	Anti-Reverse Ratchet	2355	Drag Washers Retainer
1007	Lock Washer Retainer	2280	Anti-Reverse Lock Out	2382	Key Washer
1008	Handle Lock Washer	2281	Bearing Retainer	2383	Drag Washer
1021	Handle Assembly	2282	Pinion Gear	2384	Eared Washer
1038	Sic Ceramic Roller	2283	Anti-Reverse Pawl Screw	2680	Drag Knob
1201	Bail Spring	2284	Anti-Reverse Pawl	2681	Spool Assembly
1302	Line Roller Screw	2285	Anti-Reverse Pawl Spring	2682	Rotor
1426	Spool Washer	2286	Anti-Reverse Cam	2683	Quick-Fire II Trigger
1427	Spool Support	2287	Anti-Reverse Cam Spring	2684	Bail Assembly
1442	Handle Screw Cap	2288	Worm Bearing	2685	Side Cover
1504	Bail Hold Cover Screw	2290	Idle Gear	2686	Body
1506	Bail Spring Cover Screw				

Prices and specifications subject to change without notice.